

SYSTEM OVERVIEW

Description: See Table 1 for descriptions of the configured systems. Refer also to the following.

0 N	Description	40 °C Rating		65 °C Rating			
Spec. No.	Spec. No. Description 100 V		120 VAC	208 / 240 VAC	100 VAC	120 VAC	208 / 240 VAC
582137100101	-48 VDC 350 A Power System e/w (2) LVLD's and LVBD (no front door and top cover).		N/A		217 A / 10.4 kW	278 A / 13.3 kW	350 A / 16.8 kW
582137100102	-48 VDC 500 A Power System e/w (2) LVLD's and LVBD.	281 A / 13.5 kW 360 A / 17.2 kW 500 A / 24 kW N/A					
582137100103	-48 VDC 350 A Power System e/w no LVD's (no front door and top cover).		N/A		217 A / 10.4 kW	278 A / 13.3 kW	350 A / 16.8 kW
582137100104	-48 VDC 500 A Power System e/w no LVD's.	281 A / 13.5 kW	360 A / 17.2 kW	500 A / 24 kW	N/A		
582137100105	-48 VDC 350 A Power System e/w LVBD (no front door and top cover).	D N/A 217 A / 10.4 kW 278 A / 13.3 kW 350 A		350 A / 16.8 kW			
582137100106	-48 VDC 500 A Power System e/w LVBD.	281 A / 13.5 kW	360 A / 17.2 kW	500 A / 24 kW	N/A		

Table 1

Configured Systems Descriptions

The Vertiv[™] NetSure[™] 7100 Compact DC Power System is an integrated power system containing -48 VDC output rectifiers, intelligent control, metering, monitoring, and distribution.

This system is designed to power a load while charging a positive grounded battery. This system is capable of operating in a batteryless installation or off battery for maintenance purposes. The system is designed for operation with the positive output grounded.

This system consists of the following components.

NCU (NetSure Control Unit) Controller

The NCU controller provides power system control (including optional low voltage battery disconnect (LVBD) and optional low voltage load disconnect (LVLD) control), rectifier module control (including a charge control function), metering functions, monitoring functions, local/remote alarm functions, and connections for binary inputs and programmable relay outputs via controller interface boards. The controller also supports rectifier temperature compensation if the system is equipped with a temperature probe(s). Temperature probe(s) may also be designated to monitor ambient temperature and/or battery temperature. The controller also provides data acquisition, system alarm management, and advanced battery and energy management. The controller contains a color TFT display and keypad for local access. The controller provides an Ethernet port and comes with comprehensive webpages for remote access. The controller has SNMP V3 capability for remote system management. The controller supports software upgrade via its USB port. Refer to the NCU Controller Instructions (UM1M830BNA) for more information.

• Rectifiers

The system contains nine (9) rectifier mounting positions for the Spec. No. 1R483500e3 rectifier. The rectifiers provide load power, battery float current, and battery recharge current during normal operating conditions. Refer to the Rectifier Instructions (UM1R483500E3) for more information.

Distribution

The system contains a 1-row distribution panel. The distribution panel accepts bullet nose type circuit breakers.


• Low Voltage Load Disconnect (LVLD) and Low Voltage Battery Disconnect (LVBD)

Spec. No 582137100101 and 582137100102 provides two (2) LVLD and one (1) LVBD.


Spec. No 582137100103 and 582137100104 provides no LVDs.

Spec. No 582137100105 and 582137100106 provides one (1) LVBD.

582137100101, 582137100103, 582137100105

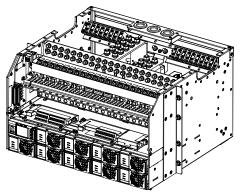

582137100102, 582137100104, 582137100106

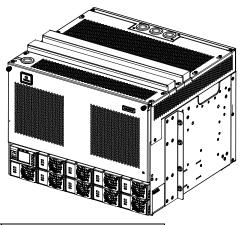

No Covers	Covers	Low Voltage Disconnect
582137100101	582137100102	(2) LVLD, (1) LVBD
582137100103	582137100104	No LVD
582137100105	582137100106	(1) LVBD

General Specifications

See detailed specifications starting on page 38.


Family:	NetSure™
Spec. Nos.:	582137100101, 582137100102, 582137100103, 582137100104, 582137100105, 582137100106
Model:	NetSure™ 7100 Compact
System AC Input Voltage:	Nominal 208 VAC / 240 VAC, single phase, 50 Hz / 60 Hz, with an operating range of 176 VAC to 275 VAC. Acceptable input frequency range is 45 Hz to 65 Hz.
	Nominal 100 VAC / 120 VAC, single phase, 50 Hz / 60 Hz, with an operating range of 85 VAC to 132 VAC. Acceptable input frequency range is 45 Hz to 65 Hz.
System AC Input Current:	17.9 A @ 208 VAC, 15.5 A @ 240 VAC (per individual rectifier AC input branch circuit).
	18.8 A @ 100 VAC, 19.8 A @ 120 VAC (per individual rectifier AC input branch circuit).
DC Output Capacity:	
System:	See "Description" on page 1.
Distribution Panel:	500 A, maximum
1R483500e3 Rectifier Rating:	See UM1R483500E3.
System Agency Approval:	UL 62368-1 Recognized ("cURus"), NEBS, GR-3108
Framework Type:	Rack Mounted in a Relay Rack or Cabinet (Wall Mounting Option Available)
Mounting Width:	See "Mechanical Specifications" starting on page 40.
Mounting Depth:	See "Mechanical Specifications" starting on page 40.
Access:	Front for Operation and Maintenance Front and Rear for Installation
Supplemental Bay(s) Available:	None
Control:	Microprocessor
Color:	Bay and Module Faceplates: Textured Gray Module Mounting Assembly and Module Bodies: Galvanized Steel
Environment:	See "Operating Ambient Temperature Range:" on page 38.

TABLE OF CONTENTS

SYSTEM OVERVIEW	
MAIN COMPONENTS ILLUSTRATIONS	5
582137100101, 52137100103, 582137100105 Configured System	5
582137100102, 52137100104, 582137100106 Configured System	6
582137100101, 52137100102, 582137100103, 582137100104, 52137100105, 582137100106 Configured System	7
LIST DESCRIPTIONS	Q
Configured Systems	
582137100101: Configured System	
582137100102: Configured System	
582137100103: Configured System	
582137100104: Configured System	
582137100105: Configured System	
582137100106: Configured System	13
ACCESSORY DESCRIPTIONS	14
Relay Racks	14
19" to 23" Wide Relay Rack Mounting Bracket Kit, P/N 553630	14
Optional Wall Mounting Bracket Kit, P/N 565533	
NCU (NetSure Control Unit) Controller, P/N 1M830BNA	15
Optional Temperature Probes	
Optional SM-Temp Temperature Concentrator	16
SM-Temp Temperature Concentrator, P/N 547490	
SM-Temp CAN Bus Interface Cable, P/N 562868	
SM-Temp Jumpers, P/N 552888	
Rectifier Module, P/N 1R483500e3	
Module Mounting Position Blank Cover Panel, P/N SXA 110 0035/1	
Distribution Devices	
Bullet Nose Type Circuit Breakers Bullet Nose Bypass Busbar, P/N 535015	
Standard Crimp Lugs, Special Application Crimp Lugs, and Busbar Adapter Kits and Hardware Kits	
Standard Crimp Lugs, Special Application Crimp Lugs, and Dusbar Adapter Kits and Hardware Kits	
Special Application Crimp Lug / Strap Combination, Busbar Lug Adapters, and Hardware Kits	20
User Replaceable Components	
RECOMMENDED WIRE SIZES, BRANCH CIRCUIT PROTECTION, CRIMP LUGS, AND WIRING ILLUSTRATIONS	
Relay Rack / Equipment Cabinet Frame Grounding Requirements	
System Shelf and Wall Mount Bracket Frame Grounding Connection	
Central Office Grounding Connection	
Rectifier AC Input Connections	
Nominal 100 VAC / 120 VAC / 208 VAC / 240 VAC Input, Single Phase	
External Alarm, Reference, Monitoring, and Control Connections	
General	
IB2 (Controller Interface Board)	
EIB (Controller Extended Interface Board)	
NCU Controller Ethernet Connection (if required)	
To NCU Front Panel Load Distribution Connections	
General	
582137100101, 582137100102	
582137100103, 582137100104	
582137100105, 582137100106	
Input Battery Connections	
General	
SPECIFICATIONS	20
1. System	
1.1 DC Output Ratings	
···	

	1.2 AC Input Ratings	38
	1.2 AC Input Ratings1.3 Environmental Ratings	
	1.4 Compliance Information	
	1.4 Compliance Information1.5 IB2 and EIB (Controller Interface Board) Ratings	
2		39
3	Controller	
MECI	HANICAL SPECIFICATIONS	40
0	verall Dimensions	40
	582137100101, 582137100103, 582137100105 Configured System	40
	582137100102, 582137100104, 582137100106 Configured System	41
	System with Optional Wall Mount Bracket Kit, P/N 565533	42
W	System with Optional Wall Mount Bracket Kit, P/N 565533	43
RELA	ATED DOCUMENTATION	43

MAIN COMPONENTS ILLUSTRATIONS 582137100101, 52137100103, 582137100105 Configured System

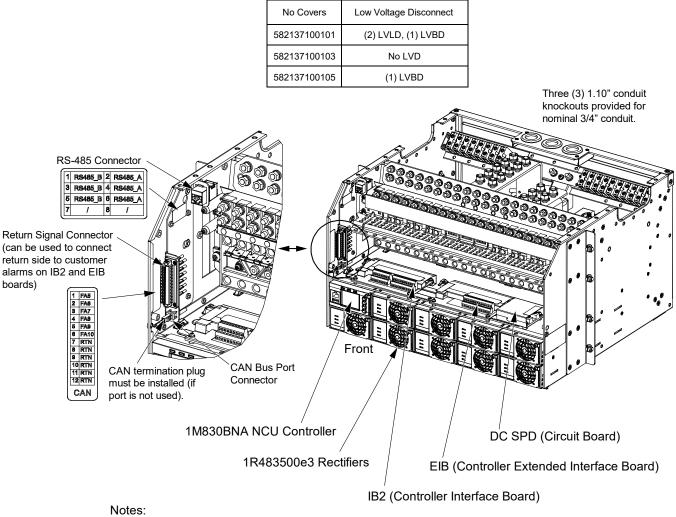


582137100101, 582137100103, 582137100105


1. The controller is not included

and must be ordered separately.

582137100102, 52137100104, 582137100106 Configured System

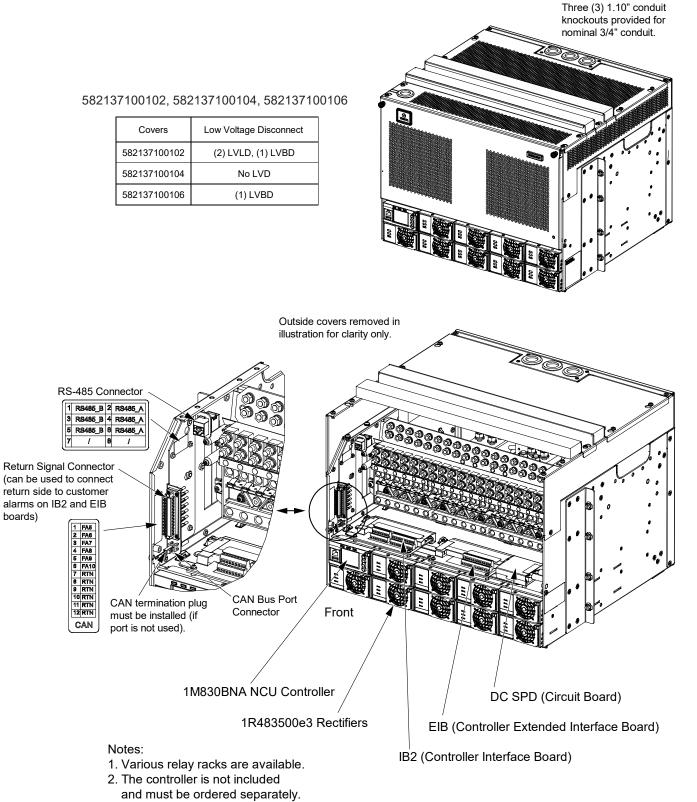

582137100101, 52137100102, 582137100103, 582137100104, 52137100105, 582137100106 Configured System

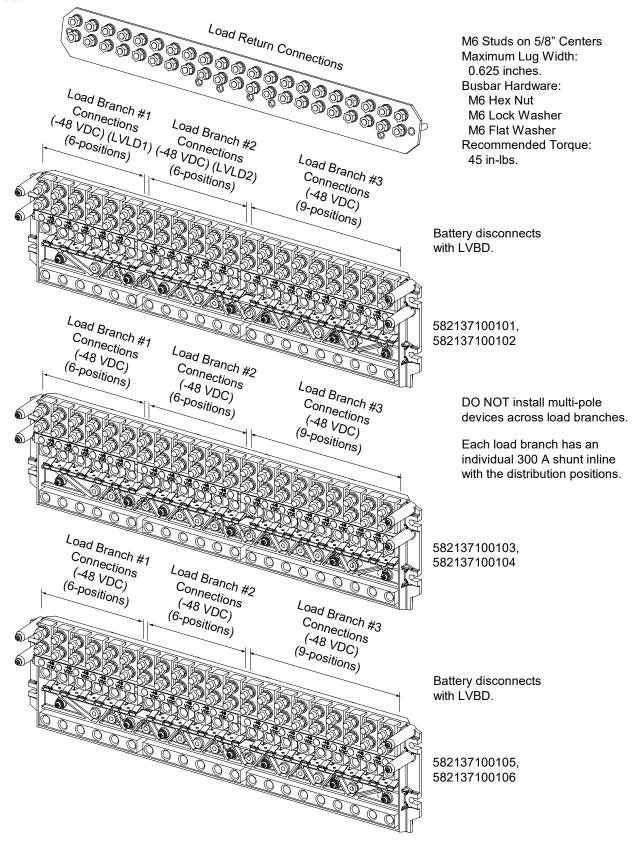

LIST DESCRIPTIONS

Configured Systems

582137100101: Configured System

Features

- Provides a -48 VDC 500 A power system e/w (2) LVLD's and LVBD no front door and top cover.
- This is a preconfigured power system which is orderable by specifying one List Number. See also "582137100101, 52137100103, 582137100105 Configured System" on page 5.
- 6RU high, 15.7" deep.
- Two (2) load LVD's and one (1) battery LVD.
- Includes a distribution panel with six (6) -48 VDC load distribution circuit breaker mounting positions controlled by LVLD1, six (6) -48 VDC load distribution circuit breaker mounting positions controlled by LVLD2, and nine (9) additional -48 VDC load distribution circuit breaker mounting positions. The battery bus is controlled by LVBD. Accommodates 1 A to 200 A Bullet Nose Type Circuit Breakers.
- Provides four (4) battery lug landing points on the battery busbar and five (5) battery lug landing points on the return busbar.
- Includes the IB2 controller interface board. The IB2 provides eight (8) programmable form C- relay outputs, eight (8) programmable binary inputs, and two (2) temperature inputs.
- Includes the EIB controller extended interface board.
 The EIB provides five (5) programmable form C- relay outputs, two (2) temperature inputs, three (3) shunt inputs (shunts must be located in the hot -48V bus), and eight (8) battery midpoint inputs.
- Includes a DC surge protection circuit board factory wired to the DC load bus.
- Includes a mounting position for an NCU controller.
- Includes nine (9) mounting position for the Spec. No. 1R483500e3 rectifier.

Restrictions

Does not have a front, top, or rear cover.

For use in an outside plant (OSP) cabinet up to 65 °C.

Maximum lug width, 0.625 inches.

See also "Restrictions" under "Bullet Nose Type Circuit Breakers" on page 18.

- 1) Order 582137100101 and the following for a configured system.
- 2) Order NCU controller P/N 1M830BNA (see page 15).
- 3) Order rectifier modules P/N 1R483500e3 as required (see page 17).
- 4) Order a blank rectifier module mounting position cover P/N SXA 110 0035/1 for each unused rectifier mounting position in the system as desired (see page 17).
- 5) Order temperature probes as required (see page 15).
- 6) Order circuit breakers as required per "Distribution Devices" starting on page 18.
- 7) Order battery and load distribution lugs, lug adapters, and lug hardware kits as required per "Standard Crimp Lugs, Special Application Crimp Lugs, and Busbar Adapter Kits and Hardware Kits" starting on page 20.

Features

- Provides a -48 VDC 500 A Power System e/w (2) LVLD's and LVBD.
- This is a preconfigured power system which is orderable by specifying one List Number. See also "582137100102, 52137100104, 582137100106 Configured System" on page 6.
- ♦ 8RU high, 16.1" deep
- Two (2) load LVD's and one (1) battery LVD.
- All system components mounted in a relay rack specified when ordered.
- Includes a distribution panel with six (6) -48 VDC load distribution circuit breaker mounting positions controlled by LVLD1, six (6) -48 VDC load distribution circuit breaker mounting positions controlled by LVLD2, and nine (9) additional -48 VDC load distribution circuit breaker mounting positions. The battery bus is controlled by LVBD.

Accommodates 1 A to 200 A Bullet Nose Type Circuit Breakers.

- Provides four (4) battery lug landing points on the battery busbar and five (5) battery lug landing points on the return busbar.
- Includes the IB2 controller interface board. The IB2 provides eight (8) programmable form C- relay outputs, eight (8) programmable binary inputs, and two (2) temperature inputs.
- Includes the EIB controller extended interface board.
 The EIB provides five (5) programmable form C- relay outputs, two (2) temperature inputs, three (3) shunt inputs (shunts must be located in the hot -48V bus), and eight (8) battery midpoint inputs.
- Includes a DC surge protection circuit board factory wired to the DC load bus.
- Includes a mounting position for an NCU controller.
- Includes nine (9) mounting position for the Spec. No. 1R483500e3 rectifier.

Restrictions

Includes a front, top, and rear cover.

For use in an environment up to 40 °C.

Maximum lug width, 0.625 inches.

See also "Restrictions" under "Bullet Nose Type Circuit Breakers" on page 18.

- 1) Order 582137100102 and the following for a configured system.
- 2) Order NCU controller P/N 1M830BNA (see page 15).
- 3) Order rectifier modules P/N 1R483500e3 as required (see page 17).
- 4) Order a blank rectifier module mounting position cover P/N SXA 110 0035/1 for each unused rectifier mounting position in the system as desired (see page 17).
- 5) Order temperature probes as required (see page 15).
- 6) Order circuit breakers as required per "Distribution Devices" starting on page 18.
- 7) Order battery and load distribution lugs, lug adapters, and lug hardware kits as required per "Standard Crimp Lugs, Special Application Crimp Lugs, and Busbar Adapter Kits and Hardware Kits" starting on page 20.
- 8) Order a relay rack as required (see page 14).

Features

- Provides a -48 VDC 500 A Power System e/w no LVD's no front door and top cover.
- This is a preconfigured power system which is orderable by specifying one List Number. See also "582137100101, 52137100103, 582137100105 Configured System" on page 5.
- 6RU high, 15.7" deep
- Does not include any LVD's.
- Includes a distribution panel with twenty-one (21) -48 VDC load distribution circuit breaker mounting positions.
 Accommodates 1 A to 200 A Bullet Nose Type Circuit Breakers.
- Provides four (4) battery lug landing points on the battery busbar and five (5) battery lug landing points on the return busbar.
- Includes the IB2 controller interface board.
 The IB2 provides eight (8) programmable form C- relay outputs, eight (8) programmable binary inputs, and two (2) temperature inputs.
- Includes the EIB controller extended interface board.
 The EIB provides five (5) programmable form C- relay outputs, two (2) temperature inputs, three (3) shunt inputs (shunts must be located in the hot -48V bus), and eight (8) battery midpoint inputs.
- Includes a DC surge protection circuit board factory wired to the DC load bus.
- Includes a mounting position for an NCU controller.
- Includes nine (9) mounting position for the Spec. No. 1R483500e3 rectifier.

Restrictions

Does not have a front, top, or rear cover.

For use in an outside plant (OSP) cabinet up to 65 °C.

Maximum lug width, 0.625 inches.

See also "Restrictions" under "Bullet Nose Type Circuit Breakers" on page 18.

- 1) Order 582137100103 and the following for a configured system.
- 2) Order NCU controller P/N 1M830BNA (see page 15).
- 3) Order rectifier modules P/N 1R483500e3 as required (see page 17).
- 4) Order a blank rectifier module mounting position cover P/N SXA 110 0035/1 for each unused rectifier mounting position in the system as desired (see page 17).
- 5) Order temperature probes as required (see page 15).
- 6) Order circuit breakers as required per "Distribution Devices" starting on page 18.
- 7) Order battery and load distribution lugs, lug adapters, and lug hardware kits as required per "Standard Crimp Lugs, Special Application Crimp Lugs, and Busbar Adapter Kits and Hardware Kits" starting on page 20.

Features

- Provides a -48 VDC 500 A Power System e/w no LVD's.
- This is a preconfigured power system which is orderable by specifying one List Number. See also "582137100102, 52137100104, 582137100106 Configured System" on page 6.
- 8RU high, 16.1" deep
- Does not include any LVD's.
- All system components mounted in a relay rack specified when ordered.
- Includes a distribution panel with twenty-one (21) -48 VDC load distribution circuit breaker mounting positions.
 Accommodates 1 A to 200 A Bullet Nose Type Circuit Breakers.
- Provides four (4) battery lug landing points on the battery busbar and five (5) battery lug landing points on the return busbar.
- Includes the IB2 controller interface board.
 The IB2 provides eight (8) programmable form C- relay outputs, eight (8) programmable binary inputs, and two (2) temperature inputs.
- Includes the EIB controller extended interface board.
 The EIB provides five (5) programmable form C- relay outputs, two (2) temperature inputs, three (3) shunt inputs (shunts must be located in the hot -48V bus), and eight (8) battery midpoint inputs.
- Includes a DC surge protection circuit board factory wired to the DC load bus.
- Includes a mounting position for an NCU controller.
- Includes nine (9) mounting position for the Spec. No. 1R483500e3 rectifier.

Restrictions

Includes a front, top, and rear cover.

For use in an environment up to 40 °C.

Maximum lug width, 0.625 inches.

See also "Restrictions" under "Bullet Nose Type Circuit Breakers" on page 18.

- 1) Order 582137100104 and the following for a configured system.
- 2) Order NCU controller P/N 1M830BNA (see page 15).
- 3) Order rectifier modules P/N 1R483500e3 as required (see page 17).
- 4) Order a blank rectifier module mounting position cover P/N SXA 110 0035/1 for each unused rectifier mounting position in the system as desired (see page 17).
- 5) Order temperature probes as required (see page 15).
- 6) Order circuit breakers as required per "Distribution Devices" starting on page 18.
- 7) Order battery and load distribution lugs, lug adapters, and lug hardware kits as required per "Standard Crimp Lugs, Special Application Crimp Lugs, and Busbar Adapter Kits and Hardware Kits" starting on page 20.
- 8) Order a relay rack as required (see page 14).

Features

- Provides a -48 VDC 500 A Power System e/w LVBD no front door and top cover.
- This is a preconfigured power system which is orderable by specifying one List Number. See also "582137100101, 52137100103, 582137100105 Configured System" on page 5.
- 6RU high, 15.7" deep
- One (1) battery LVD.
- Includes a distribution panel with twenty-one (21) -48 VDC load distribution circuit breaker mounting positions. The battery bus is controlled by LVBD.

Accommodates 1 A to 200 A Bullet Nose Type Circuit Breakers.

- Provides four (4) battery lug landing points on the battery busbar and five (5) battery lug landing points on the return busbar.
- Includes the IB2 controller interface board. The IB2 provides eight (8) programmable form C- relay outputs, eight (8) programmable binary inputs, and two (2) temperature inputs.
- Includes the EIB controller extended interface board.
 The EIB provides five (5) programmable form C- relay outputs, two (2) temperature inputs, three (3) shunt inputs (shunts must be located in the hot -48V bus), and eight (8) battery midpoint inputs.
- Includes a DC surge protection circuit board factory wired to the DC load bus.
- Includes a mounting position for an NCU controller.
- Includes nine (9) mounting position for the Spec. No. 1R483500e3 rectifier.

Restrictions

Does not have a front, top, or rear cover.

For use in an outside plant (OSP) cabinet up to 65 °C.

Maximum lug width, 0.625 inches.

See also "Restrictions" under "Bullet Nose Type Circuit Breakers" on page 18.

- 1) Order 582137100105 and the following for a configured system.
- 2) Order NCU controller P/N 1M830BNA (see page 15).
- 3) Order rectifier modules P/N 1R483500e3 as required (see page 17).
- 4) Order a blank rectifier module mounting position cover P/N SXA 110 0035/1 for each unused rectifier mounting position in the system as desired (see page 17).
- 5) Order temperature probes as required (see page 15).
- 6) Order circuit breakers as required per "Distribution Devices" starting on page 18.
- 7) Order battery and load distribution lugs, lug adapters, and lug hardware kits as required per "Standard Crimp Lugs, Special Application Crimp Lugs, and Busbar Adapter Kits and Hardware Kits" starting on page 20.

Features

- Provides a -48VDC 500A Power System e/w LVBD.
- This is a preconfigured power system which is orderable by specifying one List Number. See also "582137100102, 52137100104, 582137100106 Configured System" on page 6.
- ♦ 8RU high, 16.1" deep
- One (1) battery LVD.
- All system components mounted in a relay rack specified when ordered.
- Includes a distribution panel with twenty-one (21) -48 VDC load distribution circuit breaker mounting positions. The battery bus is controlled by LVBD.

Accommodates 1 A to 200 A Bullet Nose Type Circuit Breakers.

- Provides four (4) battery lug landing points on the battery busbar and five (5) battery lug landing points on the return busbar.
- Includes the IB2 controller interface board.
 The IB2 provides eight (8) programmable form C- relay outputs, eight (8) programmable binary inputs, and two (2) temperature inputs.
- Includes the EIB controller extended interface board.
 The EIB provides five (5) programmable form C- relay outputs, two (2) temperature inputs, three (3) shunt inputs (shunts must be located in the hot -48V bus), and eight (8) battery midpoint inputs.
- Includes a DC surge protection circuit board factory wired to the DC load bus.
- Includes a mounting position for an NCU controller.
- Includes nine (9) mounting position for the Spec. No. 1R483500e3 rectifier.

Restrictions

Includes a front, top, and rear cover.

For use in an environment up to 40 °C.

Maximum lug width, 0.625 inches.

See also "Restrictions" under "Bullet Nose Type Circuit Breakers" on page 18.

- 1) Order 582137100106 and the following for a configured system.
- 2) Order NCU controller P/N 1M830BNA (see page 15).
- 3) Order rectifier modules P/N 1R483500e3 as required (see page 17).
- 4) Order a blank rectifier module mounting position cover P/N SXA 110 0035/1 for each unused rectifier mounting position in the system as desired (see page 17).
- 5) Order temperature probes as required (see page 15).
- 6) Order circuit breakers as required per "Distribution Devices" starting on page 18.
- 7) Order battery and load distribution lugs, lug adapters, and lug hardware kits as required per "Standard Crimp Lugs, Special Application Crimp Lugs, and Busbar Adapter Kits and Hardware Kits" starting on page 20.
- 8) Order a relay rack as required (see page 14).

ACCESSORY DESCRIPTIONS

Relay Racks

Features

• Relay racks are 19" or 23" (see Table 2) standard mounting.

Ordering Notes

1) Order from relay racks listed in Table 2.

Part Number	Size	Available Mounting Positions (1RU = 1-3/4")	Notes
23" Relay Ra	cks		
559817	51.906"H x 24.376"W x 15"D	28RU	Welded
559819	84.000"H x 25.000"W x 15"D	45RU	Seismic (Note 1)
559818	72.000"H x 24.375"W x 15"D	37RU	Welded
562353	84.000"H x 25.800"W x 18"D	45RU	Seismic (Note 1, 2)
559820	84.000"H x 24.375"W x 15"D	45RU	Welded
559821	90.000"H x 24.375"W x 15"D	48RU	Welded
559822	96.000"H x 24.375"W x 15"D	51RU	Welded
19" Relay Ra	cks		
559824	84.000"H x 21.000"W x 15"D	45RU	Welded
559823	84.000"H x 20.375"W x 15"D	45RU	Seismic (Note 1)

Note 1: Complies with Bellcore Seismic Zone 4 requirements.

Note 2: For power systems mounted in relay racks with more than one battery tray.

Table 2 Available Relay Racks

 
19" to 23" Wide Relay Rack Mounting Bracket Kit, P/N 553630

Features

- Allows mounting the system in a 23" wide relay rack.
- Mounting hardware included.
- Field installed.

Ordering Notes

1) Order P/N 553630 as required.



₹\$©

Optional Wall Mounting Bracket Kit, P/N 565533

Features

- Allows for mounting the system horizontally on a wall.
- See "System with Optional Wall Mount Bracket Kit, P/N 565533" on page 42 for mounting dimensions.

Restrictions

For horizontal mount only.

Customer must supply mounting fasteners for securing the wall mount bracket to the wall.

Ordering Notes

1) Order by P/N 565533 as required.

NCU (NetSure Control Unit) Controller, P/N 1M830BNA

Features

- NCU Controller, Model M830B (Spec. No. 1M830BNA).
- Factory programmed with the configuration file required for the system configuration ordered.

Note: For custom NCU configurations, contact Vertiv.

Restrictions

Only one (1) controller per power system is required.

Ordering Notes

Order one (1) NCU controller per power system.
 582137100101 and 582137100102, order P/N 1M830BNA10009548.
 582137100103 and 582137100104, order P/N 1M830BNA10008994.
 582137100105 and 582137100106, order P/N 1M830BNA10008996.


Optional Temperature Probes


Features

- Up to two (2) temperature probes can be connected to the IB2 (Controller Interface Board). Up to two (2) additional temperature probes can be connected to the EIB (Controller Extended Interface Board). Any combination of the four (4) temperature probes can be programmed to monitor ambient temperature and/or battery temperature. A temperature probe set to monitor battery temperature can also be used for the rectifier battery charge temperature compensation feature, or the battery charge temperature probes. The battery charge temperature compensation feature allows the controller to automatically increase or decrease the output voltage of the system to maintain battery float current as battery temperature is maintained. A temperature probe set to monitor battery temperature is maintained. A temperature probe set to monitor battery temperature can also be used for the BTRM (Battery Thermal Runaway Management) feature. The BTRM feature lowers output voltage when a high temperature condition exists to control against battery thermal runaway.
- The temperature sensor end of the probe contains a tab with a 5/16" clearance hole for mounting.
- Temperature probes can also be used with the optional "SM-Temp Temperature Concentrator". See page 16.

Restrictions


A temperature probe programmed to monitor battery temperature should be mounted on the negative post of a battery cell to sense battery temperature. A temperature probe used for battery charge temperature compensation and/or BTRM (Battery Thermal Runaway Management) should also be mounted on the negative post of a battery cell. A temperature probe programmed to monitor ambient temperature should be mounted in a convenient location, away from direct sources of heat or cold.

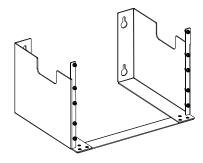

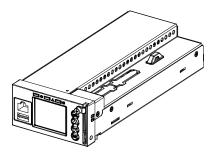

Ordering Notes

- Order temperature probes as required. Note that each temperature probe consists of two pieces which plug together to make a complete probe (see the following illustration). For a complete temperature probe, order one (1) P/N 552992 (10.3 meters) or one (1) P/N 556155 (3.3 meters). If additional length is required, order temperature probe extension cable P/N 04119122 (10 meters).
- 2) If more probes are desired, order one or more SM-Temp Temperature Concentrator, P/N 547490. See "Optional SM-Temp Temperature Concentrator" on page 16.

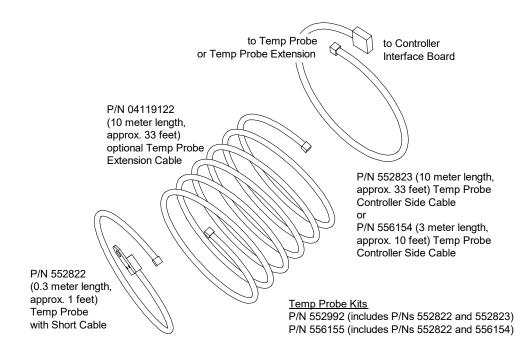


Optional SM-Temp Temperature Concentrator

SM-Temp Temperature Concentrator, P/N 547490

Features

- Allows for multiple temperature probes to be used for ambient temperature monitoring, battery temperature monitoring, temperature compensation, and/or BTRM (Battery Thermal Runaway Management).
- Provides (8) temperature probe inputs per SM-Temp unit.
- Can cascade up to (8) SM-Temp units, connecting up to sixty-four (64) temperature probes.
- The SM-Temp Concentrator is connected at the end of the NCU CAN bus. Via the CAN Bus, the NCU reads each temperature probe from each SM-Temp Concentrator.
- Refer to the SM-Temp Temperature Concentrator Instructions (UM547490) for more information.

- 1) Order SM-Temp Temperature Concentrator, P/N 547490, as required.
- 2) Order up to (8) temperature probes for each concentrator. See "Optional Temperature Probes" on page 15.
- Order one (1) SM-Temp CAN Bus Interface Cable (P/N 562868) to connect the SM-Temp into the controller's CAN bus. See "SM-Temp CAN Bus Interface Cable, P/N 562868" on page 17.
- Order SM-Temp jumpers (P/N 552888) to interconnect SM-Temp units, as required. See "SM-Temp Jumpers, P/N 552888" on page 17.

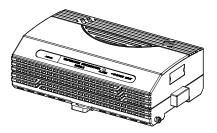

SM-Temp CAN Bus Interface Cable, P/N 562868

Features

 Used to connect the SM-Temp into the controller's CAN bus. Provides approximately 33' of 24 AWG twisted pair cable terminated at one end with an RJ-45 connector and left unterminated at the other end with the W/O and O wires stripped. The W/O (CAN_L) and O (CAN_H) wires are connected to the SM-Temp Concentrator. The RJ-45 connector plugs into the system's CAN port connector.

Ordering Notes

1) Order P/N 562868 as required.

SM-Temp Jumpers, P/N 552888

Features

 Provides 20' of 18 AWG solid red / black twisted pair cable and three (3) wire splices for connecting the CAN bus of multiple SM-Temp modules together.

Ordering Notes

1) Order P/N 552888 as required.

Rectifier Module, P/N 1R483500e3

Features

- Model R48-3500e3 (Spec. No. 1R483500e3) 3500 W / -48 VDC rectifier module.
- Refer to the Rectifier Instructions (UM1R483500e3) for more information.

Ordering Notes

1) Order by P/N 1R483500e3 as required. Each power system holds up to nine (9) rectifier modules.

 
Module Mounting Position Blank Cover Panel, P/N SXA 110 0035/1


Features

• Covers one (1) unused module mounting position.

Ordering Notes

1) Order by P/N SXA 110 0035/1 as required. Order a module mounting position blank cover panel for each empty module mounting position in the system, as desired.



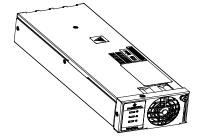



Distribution Devices

Bullet Nose Type Circuit Breakers

Features

• Each circuit breaker (as listed in Table 3) plugs into one or two distribution panel mounting position(s).

Restrictions

125 A to 200 A circuit breakers are 2-pole devices (occupy two mounting positions).

Load should not exceed 80% of device rating.

Maximum current per load branch should never exceed 190 A for list 102, 104 and 106; and never exceed 133 A for list 101, 103 and 105.

The system load current shall be not more than its rating.

DO NOT install multi-pole devices across load branches.

Ordering Notes

- 1) Order circuit breakers as required per Table 3.
- 2) See Table 10 for recommended battery and load distribution wire sizes and lugs.
- 3) When ordering 2-pole devices, busbar lug adapter kit P/N 563191 may be ordered per device. See Table 7. Other options are shown in Table 6.


Bullet Nose Bypass Busbar, P/N 535015

Features

• Replaces a bullet nose circuit breaker when a protective or disconnect device is not required.

Ordering Notes

1) Order by P/N 535015 as required.

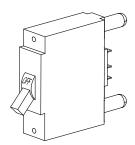

Toggle Handle Bullet Nose Circuit Breaker



Mounting Positions Required 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	Electrical Trip ¹ (White Handle) 102272 102273 102274 102275 102276 102277 102277 102278 102279 102280 102280 102281	Electrical/ Mechanical Trip ² (Black Handle) 101596 101597 101598 101599 101600 101601 101602 101603 101604
1 1 1 1 1 1 1 1 1 1 1	102273 102274 102275 102276 102277 102278 102279 102280	101597 101598 101599 101600 101601 101602 101603
1 1 1 1 1 1 1 1 1 1 1	102274 102275 102276 102277 102278 102279 102280	101598 101599 101600 101601 101602 101603
1 1 1 1 1 1 1 1 1	102275 102276 102277 102278 102279 102280	101599 101600 101601 101602 101603
1 1 1 1 1 1 1 1	102276 102277 102278 102279 102280	101600 101601 101602 101603
1 1 1 1 1	102277 102278 102279 102280	101601 101602 101603
1 1 1 1	102278 102279 102280	101602 101603
1 1 1	102279 102280	101603
1	102280	
1		101604
	102281	
1		101605
1	121998	121997
1	102282	101606
1	102283	101607
1	102284	101608
1	102285	101609
1	121996	121995
1 ⁽³⁾	138887	138888
1 ⁽³⁾	102286	101610
2 ⁽³⁾	516991	516838
2 ⁽³⁾	516993	516839
2 ⁽³⁾	144883	144884
2 ⁽³⁾	121831	121832
	oution wire sizes and lu	gs.
-	2 ⁽³⁾ 2 ⁽³⁾ 2 ⁽³⁾	2 (3) 516993 2 (3) 144883

Circuit Breaker Alarm Operation:

- ¹ Provides an alarm during an electrical trip condition only.
- ² Provides an alarm during an electrical or manual trip condition.
- ³ The circuit breaker physically requires the listed number of mounting positions. Refer to "Restrictions" under "Bullet Nose Type Circuit Breakers" on page 18 for any required empty mounting positions.
- *Note:* Electrical Trip only circuit breakers are not typically used for battery disconnect circuit breakers.

Table 3 Toggle Handle Bullet Nose Type Circuit Breakers

Standard Crimp Lugs, Special Application Crimp Lugs, and Busbar Adapter Kits and Hardware Kits

Standard Crimp Lugs

Refer to Table 4 and Table 5.

Lead Size	Part Number
14-10 AWG	245342300
8 AWG	245390200
6 AWG	245346700
4 AWG	245346800
2 AWG	245346900

Lugs should be crimped per lug manufacturer's specifications.



Lead Size	Part Number
6 AWG	245349900
4 AWG	245350000
2 AWG	245348200
1/0 AWG	245347100
2/0 AWG	245347200
3/0 AWG	245347300
4/0 AWG	245347400
250 kcmil	245347500
300 kcmil	245347600
350 kcmil	245347700
400 kcmil	245347800
500 kcmil	245347900
600 kcmil	245348000
750 kcmil	245348100

Lugs should be crimped per lug manufacturer's specifications.

Table 5 Crimp Lug Two-Hole, 3/8" Bolt Clearance Hole, 1" Centers

Special Application Crimp Lug / Strap Combination, Busbar Lug Adapters, and Hardware Kits

Features

• See Table 6 and Table 7 for part numbers and descriptions of available items.

Restrictions

See note in Table 6.

Ordering Notes

1) Order by part number from Table 6 and Table 7 as required.

Lead Size	Part Number	Description	
1/0 AWG	245393500	Creatial Application Original up (Otrop Combination)	
2/0 AWG	245393600	Special Application Crimp Lug / Strap Combination: Straps two circuit breaker wiring positions together, and provides a crimp-type lug which allows	(+) (+) (+)
3/0 AWG	245393700	distribution wiring up to 350 kcmil size (maximum size of wire to be connected to a single position is 2 AWG). Designed for use with 125 A and larger bullet nose- type circuit breakers, which require at least two mounting positions. Note: If used with bullet nose-type circuit breakers smaller than 125 A, an empty mounting position is required adjacent to the distribution device.	
4/0 AWG	245393800		
250 kcmil	514872		/_
350 kcmil	514873		

Note: For top exit cables off the return load bar in front, the lug will protrude beyond the plane of the distribution cabinet top surface for 582137100101, 582137100103, and 582137100105.

Lugs should be crimped per lug manufacturer's specifications.

Table 6 Special Application Crimp Lug / Strap Combination (Two-Hole Lug, 1/4" Bolt Clearance Hole, 5/8" Centers)

Part Number	Description	
563191	Busbar Lug Adapter Kit: Includes one (1) busbar that mounts on the two lug landing positions of either of the following: • a 125 A, 150 A, or 200 A bullet nose circuit breaker. • two landings of the associated ground return bar. This busbar provides a landing for one standard two-hole lug having 3/8" bolt clearance holes on 1" centers. Lug mounting hardware is included. Discard 1/4" hardware. Order two (2) Part No. 563191 per 125 A, 150 A, and 200 A bullet nose circuit breaker ordered, as desired.	

Busbar lug adapter kits include hardware shown.

Unless otherwise specified, busbar lug adapter kits are factory installed when ordered with system.

Table 7 Busbar Lug Adapter and Hardware Kits

User Replaceable Components

Ordering Notes

1) Refer to Table 8.

Item	Part Number	
Rectifier Module	1R483500e3	
NCU Controller	1M830BNA10009548 (582137100101 and 582137100102) 1M830BNA10008994 (582137100103 and 582137100104) 1M830BNA10008996 (582137100105 and 582137100106)	
Controller IB2 Interface Board	MA4C5U31	
Controller EIB Extended Interface Board	MA455U41	

Table 8 Replaceable Assemblies

RECOMMENDED WIRE SIZES, BRANCH CIRCUIT PROTECTION, CRIMP LUGS, AND WIRING ILLUSTRATIONS

Relay Rack / Equipment Cabinet Frame Grounding Requirements

For relay rack / equipment cabinet grounding requirements, refer to the current edition of the American National Standards Institute (ANSI) approved National Fire Protection Association's (NFPA) National Electrical Code (NEC), applicable local codes, and your specific site requirements.

A customer's grounding network lead can be attached to the top of each relay rack. Provision is made for installing a lead with a two-hole lug that has 1/4" bolt clearance holes on 5/8" centers. Refer to Table 4 for lug selection.

System Shelf and Wall Mount Bracket Frame Grounding Connection

A frame ground stud is located inside the system shelf (see Figure 1 and Figure 2). For system shelf and wall mount bracket frame grounding requirements, refer to the current edition of the American National Standards Institute (ANSI) approved National Fire Protection Association's (NFPA) National Electrical Code (NEC), applicable local codes, and your specific site requirements.


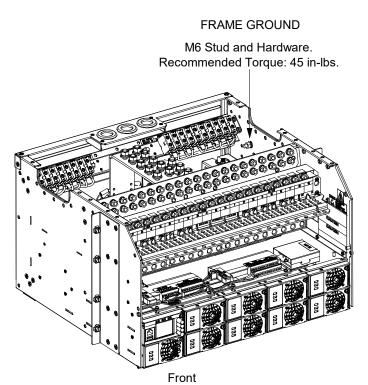


Figure 1

System Shelf and Wall Mount Bracket Frame Grounding Connection Point (582137100101, 582137100103, 582137100105)




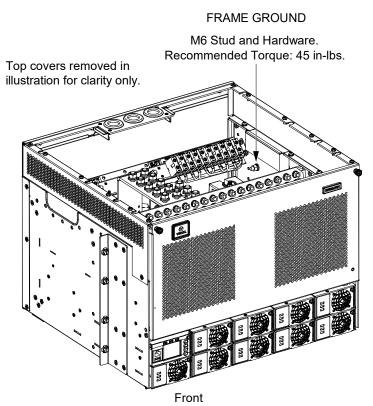


System Shelf and Wall Mount Bracket Frame Grounding Connection Point (582137100102, 582137100104, 582137100106)

Central Office Grounding Connection

 Landing points are provided on the battery return bus for a central office ground lead (see Figure 3). For central office grounding requirements, refer to the current edition of the American National Standards Institute (ANSI) approved National Fire Protection Association's (NFPA) National Electrical Code (NEC), applicable local codes, and your specific site requirements.

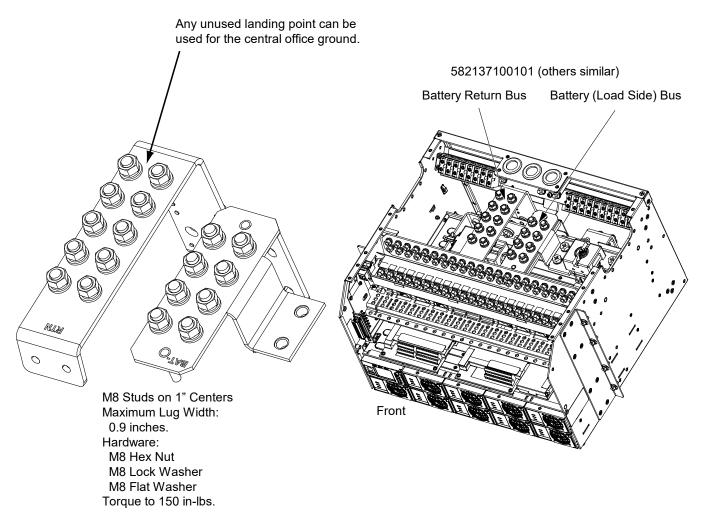



Rectifier AC Input Connections

Nominal 100 VAC / 120 VAC / 208 VAC / 240 VAC Input, Single Phase

Refer to Table 9 for recommended wire sizes and branch circuit protection.

Refer to Figure 4 for an illustration.


Rectifier AC Input Connection Points for Individual Rectifier Module AC Input Branch Circuits are Provided (One AC Input Branch Circuit per Rectifier Module, Nine AC Input Branch Circuits per System)					
Input Overcurrent		40 °C Ambient Temperature			
Input Voltage	Current (5)	Protection ⁽¹⁾	Wire Size ^{(3) (4) (6)}	Conduit Size 77	
100 VAC	18.8 A	25 A (2)	10 AWG	3/4"	
120 VAC	19.8 A	25 A ⁽²⁾	10 AWG	3/4"	
208 VAC	17.9 A	25 A ⁽²⁾	10 AWG	3/4"	
240 VAC	15.5 A	20 A	12 AWG	1/2"	


¹ The AC input branch circuit protective device should be of the time-delay or high inrush type.

² Maximum over current protection device is 30 A @ 40 °C.

- ³ Wire sizes based on recommendations of the American National Standards Institute (ANSI) approved National Fire Protection Association's (NFPA) National Electrical Code (NEC). Table 310.15 (B) (16) for copper wire at 90 °C conductor temperature. For operation in countries where the NEC is not recognized, follow applicable codes.
- ⁴ Equipment grounding conductors must be provided with the AC input conductors supplied to the assembly. Frame ground terminals must be connected to earth ground, not power system neutral. Equipment grounding conductor size based on recommendations of the NEC Table 250-122 for copper wire. If aluminum or copper clad aluminum grounding conductor is used, refer to Table 250-122 for increased conductor size. For operation in countries where the NEC is not recognized, follow applicable codes.
- ⁵ Input current based on R48-3500e3 rectifier module.
- ⁶ THHN 90°C Wire.
- ⁷ Three (3) rectifiers (6 current and 1 ground wire) per conduit.

 Table 9 Recommended AC Input Branch Circuit Protection and Wire Size

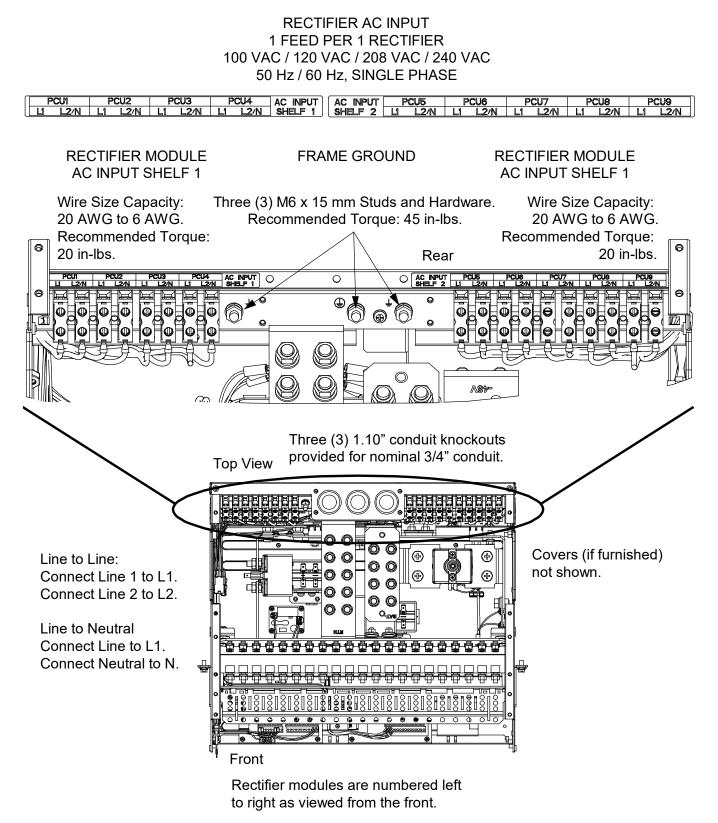



External Alarm, Reference, Monitoring, and Control Connections

<u>General</u>

Recommended wire size is 22 AWG for loop lengths up to 200 ft. and 18 AWG to 20 AWG for loop lengths over 200 ft. Refer to Figure 5.


582137100101 Shown, others similar

IB2 (Controller Interface Board)

Refer to Figure 6.

EIB (Controller Extended Interface Board)

Refer to Figure 7.

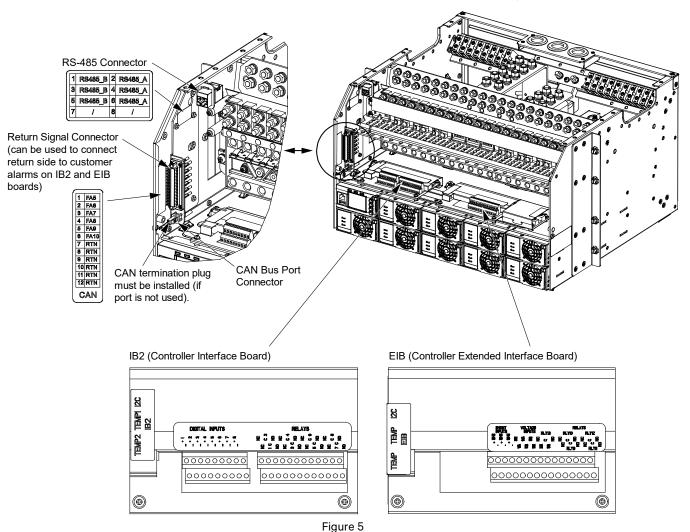

External Alarm, Reference, Monitoring, and Control Connections Locations


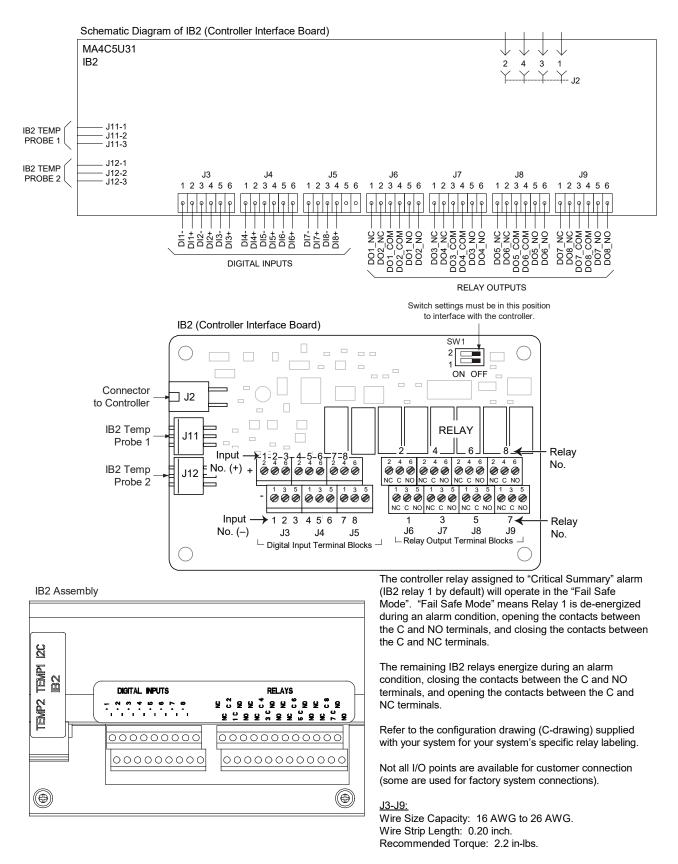


Figure 6 External Alarm, Reference, Monitoring, and Control Connections, IB2 (Controller Interface Board)

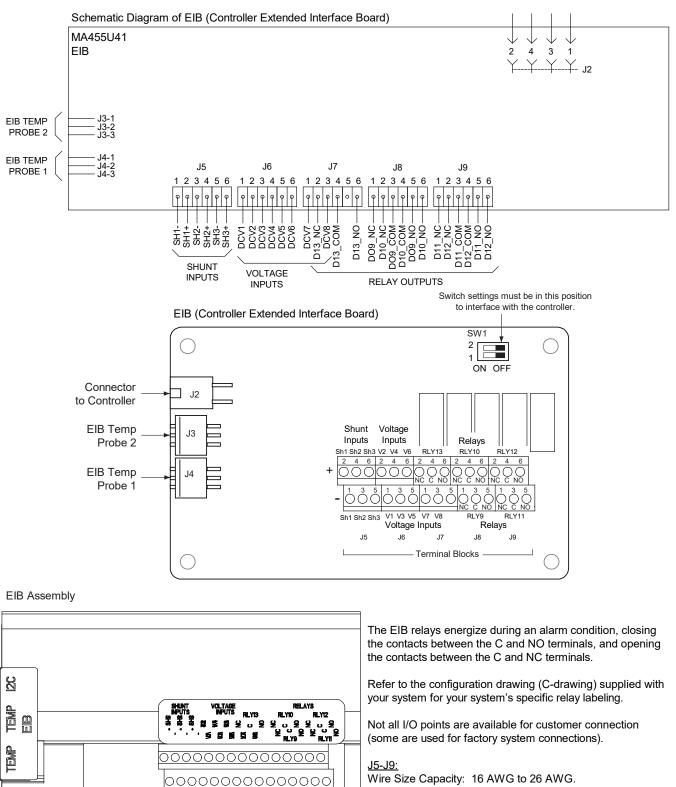

Wire Size Capacity: 16 AWG to 26 AWG Wire Strip Length: 0.20 inch. Recommended Torque: 2.2 in-lbs.

Figure 7

 
External Alarm, Reference, Monitoring, and Control Connections, EIB (Controller Extended Interface Board)

 (\oplus)

NCU Controller Ethernet Connection (if required)

To NCU Front Panel

The NCU Controller provides a Web Interface via an Ethernet connection to a TCP/IP network. This interface can be accessed locally on a computer or remotely through a network. An RJ-45 Ethernet jack is provided on the front of the NCU.



NCU Ethernet Port

Load Distribution Connections

General

Load leads are connected to the individual load busbars located on the distribution panels. Load return leads are connected to the return busbars located at the top of the system cabinet. These busbars provide M6 studs for installation of customer-provided two-hole lugs that have 6 mm bolt clearance holes on 5/8" centers.

Maximum size of wire to be connected to a single circuit breaker position is 2 AWG. Refer to Table 4 for available lugs. For wiring up to 350 kcmil, see "Special Application Crimp Lug / Strap Combination" in Table 6 (restrictions apply, see note in Table 6). Refer also to "Busbar Lug Adapter and Hardware Kits" in Table 7 for other lug options.

The rating of the distribution device determines the load lead wire size requirement. Table 10 can be used to select recommended load distribution wire sizes and lugs for various loop lengths per circuit breaker ampere rating.

<u>582137100101, 582137100102</u>

Refer to Figure 9.

<u>582137100103, 582137100104</u>

Refer to Figure 10.

582137100105, 582137100106

Refer to Figure 11.

Circuit	Recm 90°C Wire Size ⁽¹⁾									
Circuit Breaker	14 AWG	12 AWG	10 AWG	8 AWG	6 AWG	4 AWG	2 AWG	1/0 AWG		
Amperage		Loop Length (feet) ⁽²⁾								
1, 3, 5, 6, 10 A	37 ^(3, 4, 5, 6)	58 ^(3, 4, 5, 6)	93 ^(3, 4, 5, 6)	148 ^(3, 4, 5, 6)	236 (3, 4, 5, 6)	376 ^(3, 4, 5, 6)	597 ^(3, 4, 5, 6)			
15 A	24 (3, 4, 5, 6)	39 ^(3, 4, 5, 6)	62 (3, 4, 5, 6)	99 ^(3, 4, 5, 6)	157 ^(3, 4, 5, 6)	250 ^(3, 4, 5, 6)	398 ^(3, 4, 5, 6)			
20 A		29 (3, 4, 5, 6)	46 (3, 4, 5, 6)	74 ^(3, 4, 5, 6)	118 ^(3, 4, 5, 6)	188 ^(3, 4, 5, 6)	298 (3, 4, 5, 6)			
25 A			37 ^(3, 4, 5, 6)	59 ^(3, 4, 5, 6)	94 ^(3, 4, 5, 6)	150 ^(3, 4, 5, 6)	239 (3, 4, 5, 6)			
30 A			31 ^(3, 4, 5, 6)	49 ^(3, 4, 5, 6)	78 ^(3, 4, 5, 6)	125 ^(3, 4, 5, 6)	199 ^(3, 4, 5, 6)			
35 A				42 ^(3, 4, 5, 6)	67 ^(3, 4, 5, 6)	107 (3, 4, 5, 6)	170 ^(3, 4, 5, 6)			
40 A				37 ^(3, 4, 5, 6)	59 ^(3, 4, 5, 6)	94 ^(3, 4, 5, 6)	149 ^(3, 4, 5, 6)			
45 A				33 ^(3, 4, 5)	52 ^(3, 4, 5, 6)	83 ^(3, 4, 5, 6)	132 ^(3, 4, 5, 6)			
50 A				29 ^(3, 4)	47 ^(3, 4, 5, 6)	75 ^(3, 4, 5, 6)	119 ^(3, 4, 5, 6)			
60 A					39 ^(3, 4, 5)	62 ^(3, 4, 5, 6)	99 ^(3, 4, 5, 6)			
70 A						53 ^(3, 4, 5, 6)	85 ^(3, 4, 5, 6)			
75 A						50 ^(3, 4, 5)	79 ^(3, 4, 5, 6)			
80 A						47 ^(3, 4, 5)	74 ^(3, 4, 5, 6)			
			Recomm	nended Crimp	Lug ⁽⁷⁾					
Lug	245342300	245342300	245342300	245390200	245346700	245346800	245346900			

Circuit	Recm 90°C Wire Size ⁽¹⁾								
Breaker	2 AWG	1/0 AWG	2/0 AWG	3/0 AWG	4/0 AWG	250 kcmil	350 kcmil	500 kcmil	
Amperage	Loop Length (feet) ⁽²⁾								
90 A	66 ^(3, 4, 5, 6)	105 (3, 4, 5, 6)	133 ^(3, 4, 5, 6)						
100 A	59 ^(3, 4, 5)	95 ^(3, 4, 5, 6)	119 ^(3, 4, 5, 6)						
125 A	47 ⁽³⁾	76 (3, 4, 5, 6)	95 ^(3, 4, 5, 6)	120 (3, 4, 5, 6)					
150 A		63 ^(3, 4, 5)	79 ^(3, 4, 5, 6)	100 (3, 4, 5, 6)					
200 A				75 ^(3, 4)	95 ^(3, 4, 5)	112 ^(3, 4, 5, 6)			
Recommended Crimp Lug									
Lug	245346900 (7)	245393500 ⁽⁸⁾	245393600 ⁽⁸⁾	245393700 ⁽⁸⁾	245393800 ⁽⁸⁾	514872 ⁽⁸⁾	514873 ⁽⁸⁾	See Note 9.	

Table 10 (cont'd on next page)

Recommended Battery and Load Distribution Wire Size and Lug Selection

for Bullet Nose-Type Circuit Breaker


Notes to Table 10:

- ¹ Wire sizes based on recommendations of the American National Standards Institute (ANSI) approved National Fire Protection Association's (NFPA) National Electrical Code (NEC). Table 310.15 (B) (16) for copper wire at 90 °C conductor temperature. For operation in countries where the NEC is not recognized, follow applicable codes.
- Recommended wire sizes are sufficient to restrict voltage drop to 1.0 volt or less at listed branch current for the loop lengths shown. Loop length is the sum of the lengths of the positive and negative leads.
- ³ Wire Size / Loop Length Combination Calculated using 40 °C Ambient Operating Temperature.
- ⁴ Wire Size / Loop Length Combination Calculated using 50 °C Ambient Operating Temperature.
- ⁵ Wire Size / Loop Length Combination Calculated using 55 °C Ambient Operating Temperature.
- ⁶ Wire Size / Loop Length Combination Calculated using 65 °C Ambient Operating Temperature.
- 7 These lugs are two-hole for 1/4" bolt clearance on 5/8" centers. Lugs should be crimped per lug manufacturer's specifications.
- ⁸ Special application crimp lug / strap combination (restrictions apply, see note in Table 6).
- ⁹ See "Special Application Crimp Lug / Strap Combination, Busbar Lug Adapters, and Hardware Kits" on page 21 and Table 5.


Table 10 (cont'd from previous page)

Recommended Battery and Load Distribution Wire Size and Lug Selection


for Bullet Nose-Type Circuit Breaker

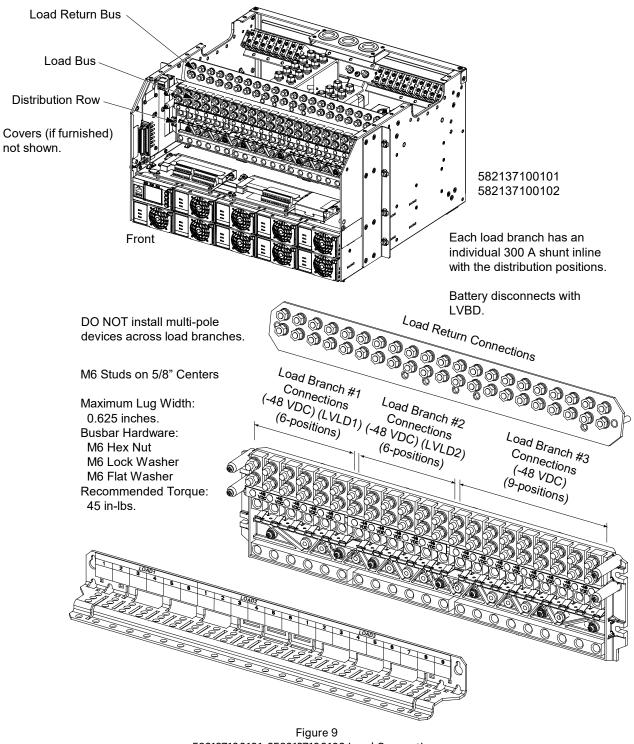


582137100101, 2582137100102 Load Connections

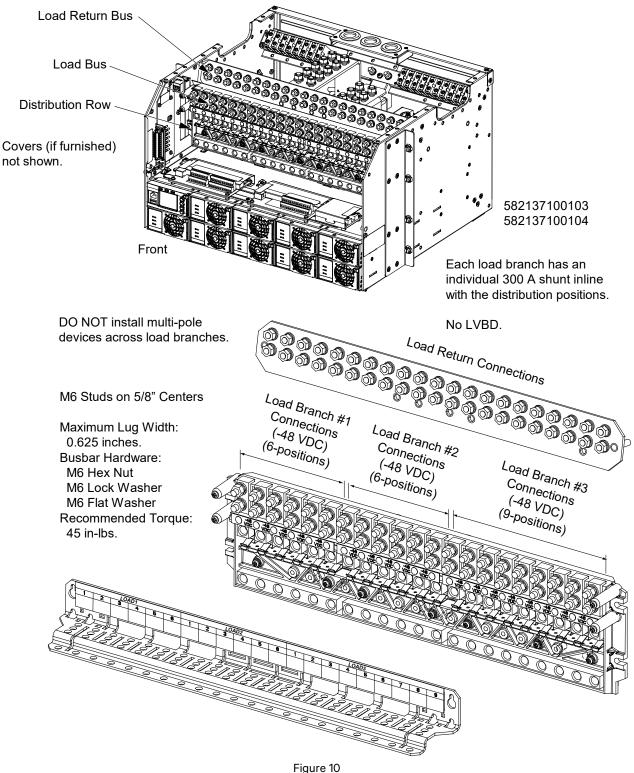

 582137100103, 2582137100104 Load Connections

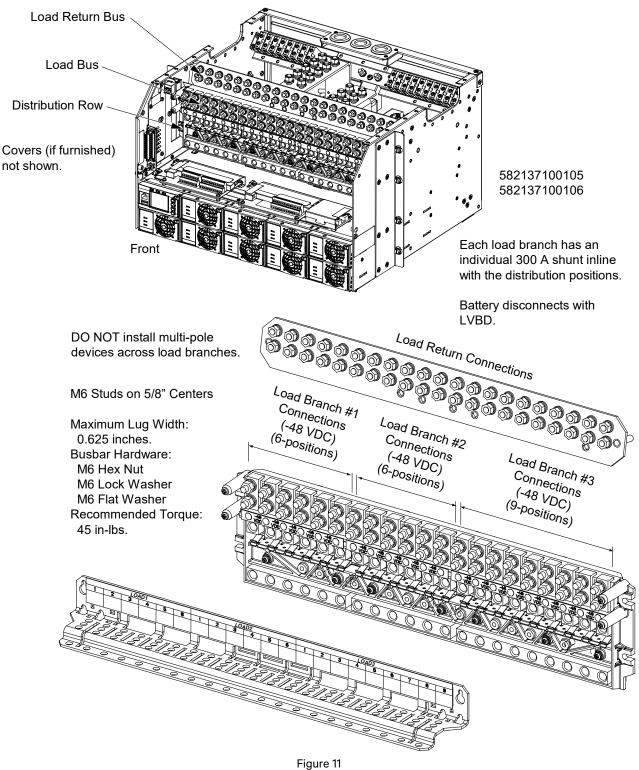



Input Battery Connections

<u>General</u>

Input battery leads are connected to the battery (load side) busbar and battery return busbar. These busbars provide M8 studs for installation of customer provided two hole lugs that have 8 mm bolt clearance holes on 1 inch centers. Battery wire size and lug requirements are determined by site requirements. See Table 5 for available lugs. Refer to Figure 12.

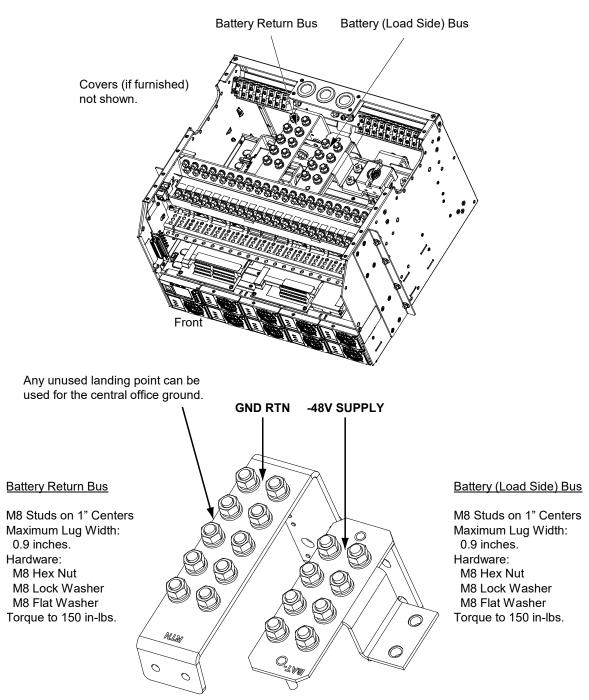


Figure 12 Battery Connections

SPECIFICATIONS

- 1. SYSTEM
 - 1.1 DC Output Ratings
 - 1.1.1 See page 2.
 - 1.1.2 The product has a short circuit rating of 10,000 DC amperes.
 - 1.2 AC Input Ratings
 - 1.2.1 See page 2.
 - 1.3 Environmental Ratings
 - 1.3.1 Operating Ambient Temperature Range:
 - (A) Without Front Door, Top Covers, and Rear Covers: -40 °C to +65 °C (-40 °F to +149 °F).
 - (B) With Front Door, Top Covers, and Rear Covers: -40 °C to +40 °C (-40 °F to +104 °F).
 - 1.3.2 Storage Ambient Temperature Range: -40 °C to +70 °C (-40 °F to +158 °F).
 - 1.3.3 Relative Humidity: Capable of operating in an ambient relative humidity range of 0% to 95%, non-condensing.
 - 1.3.4 Altitude: Capable of operating in an altitude range of -200 feet to 10,000 feet. The maximum operating ambient temperature should be de-rated by 3 °C per 1000 feet above 6562 feet.
 - 1.3.5 EMI/RFI Suppression: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15, Subpart B of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures.
 - (A) Reorient or relocate the receiving antenna.
 - (B) Increase the separation between the equipment and receiver.
 - (C) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - 1.3.6 Mounting: This power system is designed to mount in a standard 19" or 23" relay rack or equipment rack having 1" or 1-3/4" multiple drillings. Wall mounting options are also available. Refer to "Overall Dimensions" on page 40 for mounting dimensions.
 - This product is intended only for installation in a restricted access location on or above a non-combustible surface.
 - This product must be located in a controlled environment with access to crafts persons only.
 - This product is intended for installation in network telecommunication facilities (CO, vault, hut, or other environmentally controlled electronic equipment enclosure).
 - This product is intended to be connected to the common bonding network in a network telecommunication facility (CO, vault, hut, or other environmentally controlled electronic equipment enclosure).
 - The DC return connection to this system can remain isolated from system frame and chassis (DC-I).
 - This system is suitable for installation as part of the Common Bonding Network (CBN).
 - The system must be mounted in an environment that does not exceed the Operating Ambient Temperature Range stated above.
 - Clearance requirements are (relay rack):
 - a) Recommended minimum aisle space clearance for the front of each bay is 2'6".
 - b) Recommended minimum aisle space clearance for the rear of each bay is 2'0".
 - Clearance requirements are (cabinet or wall mounting):
 - a) Recommended minimum clearance for the rear of the system is 4".

- 1.4 Compliance Information
 - 1.4.1 Safety Compliance: UL 62368-1 Recognized ("cURus"). This is a UL Recognized power system for use in Information and Communication Technology Equipment.
 - 1.4.2 NEBS Compliance: Compliance verified by a Nationally Recognized Testing Laboratory (NRTL) per GR-1089-CORE and GR-63-CORE. Contact Vertiv for NEBS compliance reports.

Rectifier Modules: In order to remain compliant during a fan failure condition, the backup battery connection must be utilized to provide sufficient power to the loads for up to eight (8) hours when the system is operated at greater than 50% output power. If no backup battery connection is used, the system must operate with a redundant module installed.

- 1.4.3 GR-3108: GR-3108 class 2 compliant.
- 1.5 IB2 and EIB (Controller Interface Board) Ratings
 - 1.5.1 Digital Input Ratings
 - (A) Maximum Voltage Rating: 60 VDC.
 - (B) Active High: > 19 VDC.
 - (C) Active Low: < 1 VDC.
 - 1.5.2 Relay Ratings
 - (A) Steady State: 0.5 A @ 60 VDC, 1.0 A @ 30 VDC.
 - (B) Peak: 3 A @ 30 VDC.
- 2. RECTIFIER

Refer to the Rectifier Instructions (UM1R483500E3).

3. CONTROLLER


Refer to the NCU Controller Instructions (UM1M830BNA).

For controller factory settings, refer to the Controller Configuration Drawing (C-drawing).

MECHANICAL SPECIFICATIONS


Overall Dimensions

582137100101, 582137100103, 582137100105 Configured System

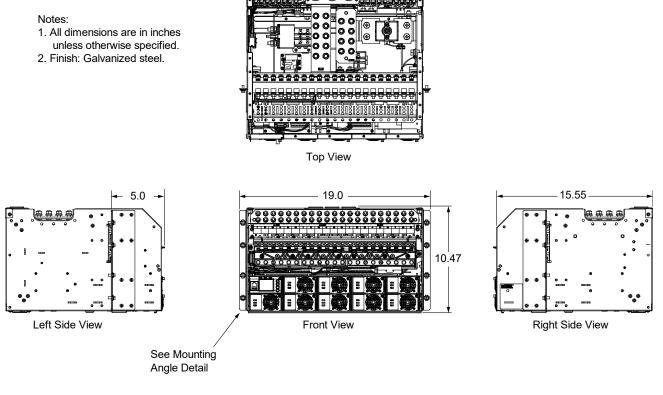


ALLER

 $\bigcirc \bigcirc$

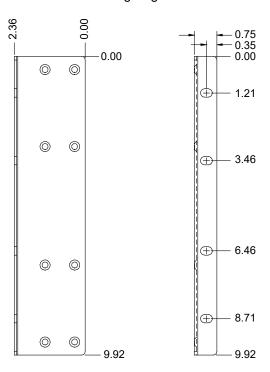


Mounting Angle Detail

582137100102, 582137100104, 582137100106 Configured System

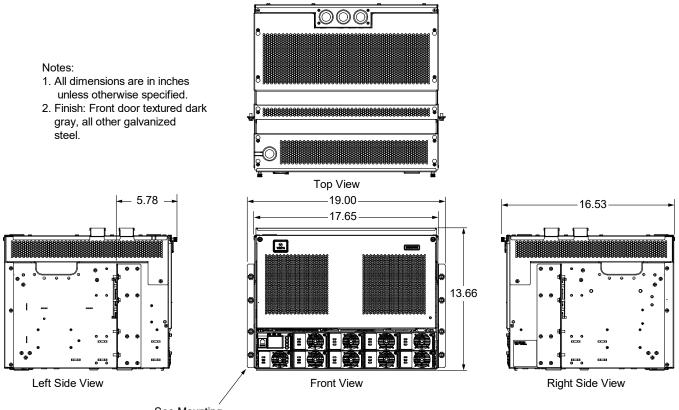


See Mounting Angle Detail

tail

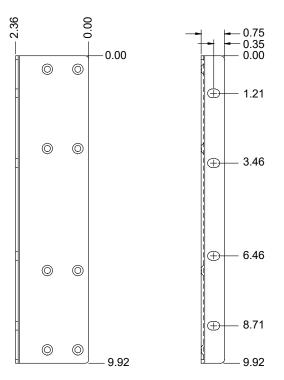

Mounting Angle Detail

System with Optional Wall Mount Bracket Kit, P/N 565533

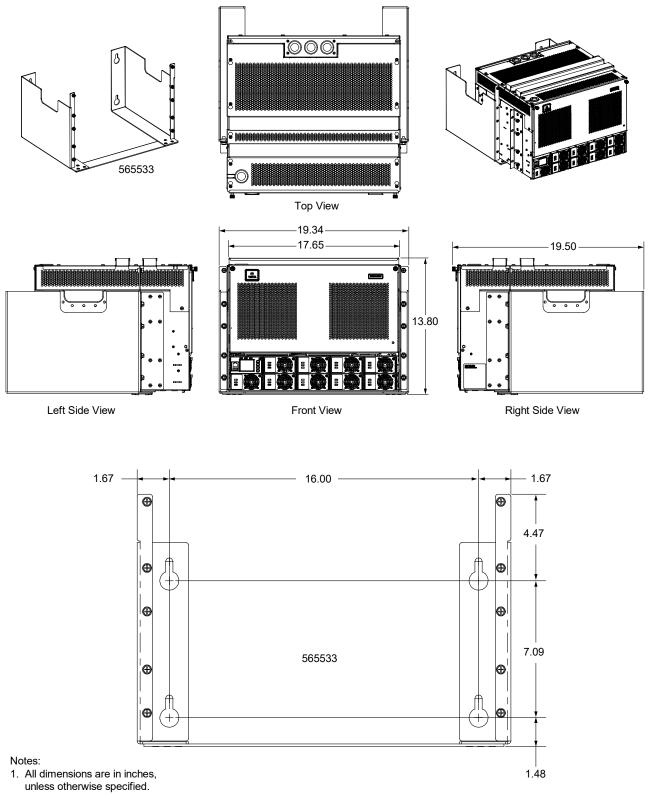

2. Installer to furnish hardware for fastening bracket to wall.

Weights

List Number or Part Number	Net Weight (Ibs), each	Description
Configured System	ı	
582137100101	49	Configured System
582137100102	54	Configured System
582137100103	42	Configured System
582137100104	47	Configured System
582137100105	46	Configured System
582137100106	51	Configured System
Rectifier		
1R483500e3	3.7	Rectifier Module
Controller		
1M830BNA	2.2	NCU Controller
Relay Racks		
559817	51	Relay Rack
559819	156	Relay Rack
562353	229	Relay Rack
559818	103	Relay Rack
559820	113	Relay Rack
559821	81	Relay Rack
559822	123	Relay Rack
559824	93	Relay Rack
559823	167	Relay Rack

RELATED DOCUMENTATION

System Installation and User Instructions:	UM582137100101
NCU Controller Instructions:	UM1M830BNA
Rectifier Instructions:	UM1R483500E3
Main Schematic Diagrams:	SD582137100101 (System)
Main Wiring Diagrams:	T582137100101 (System)

Vertiv.com | Vertiv Headquarters, 505 N Cleveland Ave, Westerville, OH 43082, USA

© 2023 Vertiv Group Corp. All rights reserved. Vertiv[™] and the Vertiv logo are trademarks or registered trademarks of Vertiv Group Corp. All other names and logos referred to are trade names, trademarks or registered trademarks of their respective owners. While every precaution has been taken to ensure accuracy and completeness here, Vertiv Group Corp. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions.

