

# Alber Universal Xplorer Industrial Monitor (UXIMe) Battery Monitor

## Installation Guide



Vertiv Corporation  
1050 Dearborn Drive  
Columbus, OH 43085  
Tel: (954) 377-7101  
[www.vertivco.com](http://www.vertivco.com)  
590-2172-501A/SL-29241/4200-136

---

The information contained in this document is subject to change without notice and may not be suitable for all applications. While every precaution has been taken to ensure the accuracy and completeness of this document, Vertiv assumes no responsibility and disclaims all liability for damages resulting from use of this information or for any errors or omissions. Refer to other local practices or building codes as applicable for the correct methods, tools, and materials to be used in performing procedures not specifically described in this document.

The products covered by this instruction manual are manufactured and/or sold by Vertiv. This document is the property of Vertiv and contains confidential and proprietary information owned by Vertiv. Any copying, use or disclosure of it without the written permission of Vertiv is strictly prohibited.

**Notice to Users**

Vertiv Corporation reserves the right to make changes to this document without notice to any user or reseller of this product. Vertiv Corporation also reserves the right to substitute or terminate distribution of this document, with no obligation to notify any person or party of such substitutions or terminations.

---

# Vertiv Customer Service

Vertiv Customer Service is available Monday to Friday, 8:00AM to 4:30PM Eastern Time.

Telephone: (954) 377-7101

Email: [alber-service@vertivco.com](mailto:alber-service@vertivco.com)

Website: [www.vertivco.com](http://www.vertivco.com)

Corporate Office Address:

Vertiv Corporation

1050 Dearborn Drive

Columbus, OH 43085 USA

---

# Table of Contents

1.	Safety Information.....	1-1
1.1	General.....	1-1
1.2	Document Symbols.....	1-1
1.3	Safety Symbols.....	1-1
1.4	Product Safety Practices.....	1-2
2.	Preventive Maintenance.....	2-1
2.1	Visual Inspection.....	2-1
2.2	System Component Cleaning.....	2-1
2.3	Sense Lead and Ring Terminal Cleaning.....	2-1
2.4	Internal Component Replacement.....	2-1
3.	System Overview.....	3-1
4.	System Installation.....	4-1
5.	Materials Received List.....	5-1
6.	System Installation Considerations.....	6-1
6.1	Disconnect Device.....	6-1
6.2	Equipment Location.....	6-1
6.3	Rack Mounting.....	6-1
6.4	Mounting Options.....	6-1
6.5	Wire Length.....	6-1
6.6	Battery String Isolation.....	6-1
6.7	Cell Number 1 Identification.....	6-1
7.	Installation of Tab Washers.....	7-1
8.	Unit Configuration.....	8-1
8.1	Digital Input Configuration.....	8-1
8.2	RS-485 Termination.....	8-3
9.	Equipment Mounting.....	9-1
9.1	Flush Mounting Kit (Optional).....	9-1
10.	Sense Lead Harness Connections.....	10-1
10.1	Voltage Sense Lead Connection Preparation.....	10-1
10.2	Systems with Dual or Multiple Positive and Negative Posts.....	10-3
11.	Fused Resistance Load Lead Harness Connections.....	11-1
12.	Charger Cable Resistance Reading Connection.....	12-1

---

13.	Ambient Temperature Sensor Connection.....	13-1
14.	Digital Inputs Connection .....	14-1
15.	RS-485 Communication Connection .....	15-1
16.	Fiber Optic Communication Connection .....	16-1
17.	Network Communication Connection .....	17-1
17.1	Network Protocols Supported.....	17-1
18.	Parameter Alarm Connection.....	18-1
19.	Hardware Alarm Connection .....	19-1
20.	ELS2 Connections .....	20-2
21.	UXIMe Specifications .....	21-1
21.1	UXIMe System Specifications .....	21-1
21.2	Cell Measurements .....	21-2
21.3	System Measurements .....	21-2
22.	UXIMe Drawings.....	22-1
23.	Index .....	23-1

---

# List of Figures

Figure 1 - Typical System Connection .....	3-2
Figure 2 - Exposed Post Tab Washer Assembly.....	7-1
Figure 3 - Recessed Post Tab Washer Assembly.....	7-2
Figure 4 - Digital Input Jumper Locations.....	8-2
Figure 5 - RS-485 Jumper Locations .....	8-3
Figure 6 - Optional Flush Mount Kit Mounting .....	9-1
Figure 7 - Voltage Sense Lead Connections to Battery .....	10-2
Figure 8 - Exposed Dual or Multiple Posts Connections.....	10-3
Figure 9 - Resistance Steps Connection to Battery.....	11-1
Figure 10 - Charger Control Sense Lead Connection to Battery and Charger. ....	12-1
Figure 11 - 25', 50', 75' or 100' Single and Dual Ambient Temperature Harness.....	13-1
Figure 12 - Digital Inputs.....	14-1
Figure 13 - RS-485 Connections.....	15-1
Figure 14 - Minimum Fiber Optic Bend Radius .....	16-1
Figure 15 - Network Connection .....	17-1
Figure 16 - Alarm Contacts.....	18-1
Figure 17 - Hardware Alarm Contacts.....	19-1
Figure 18 - ELS2 Power Connections .....	20-2
Figure 19 - UXIME Wiring Schematic Diagram .....	22-2

---

# List of Tables


Table 1 - Installation Task List ..... 4-1  
Table 2 - Model Number Description ..... 5-1  
Table 3 - Inventory List ..... 5-3  
Table 4 - Digital Input Modes ..... 8-1  
Table 5 - Digital Input Jumper Settings ..... 8-1  
Table 6 - Cell Measurement Specifications ..... 21-2  
Table 7 - System Measurement Specifications ..... 21-2

# 1. Safety Information

## 1.1 General




The protective features of this product may be compromised if it is used in a manner not specified in this guide and/or related operation or installation instructions. This manual describes general installation of the system. If the system has features or accessories not described in this manual, contact Vertiv.

The following general safety precautions must be observed during all phases of operation, service, and repair of this product. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the product. Vertiv assumes no liability for the customer's failure to comply with these requirements.

 <b>Note</b>	<ul style="list-style-type: none"> <li>• Use safety equipment when working in and around the batteries.</li> <li>• Never energize the UXIMe until after the installation is complete.</li> <li>• Never exceed equipment voltage, power ratings or capabilities.</li> </ul>
--	--



## 1.2 Document Symbols

The symbols below appear in this manual or are affixed to the Vertiv device. It is important to review these symbols and to understand the type of instructional information they convey.

 <b>Warning</b>	<p><b>Highlights areas related to user safety.</b></p> <p>Calls attention to a procedure, practice, or condition which, if not correctly followed, could result in personal injury. Do not proceed beyond a WARNING symbol until the indicated conditions are fully understood and met. Always observe safety information when installing, setting up or operating this product.</p>
 <b>Caution</b>	<p><b>Highlights areas related to product or data safety.</b></p> <p>Calls attention to an operating procedure or condition which, if not correctly followed, could result in damage to the product or permanent loss of data. Do not proceed beyond a CAUTION symbol until the indicated conditions are fully understood and met.</p>
 <b>Note</b>	<p><b>The Note symbol calls attention to important information.</b></p> <p>Describes additional information to help the user.</p>

## 1.3 Safety Symbols

The following symbols may appear on the system or individual equipment.

	<p>Important Information; refer to this guide.</p>
	<p>Functional earth terminal.</p>



## 1.4 Product Safety Practices

The following describe safety practices particular to the installation or operation of the product.

### Equipment Service

Proper installation and testing are essential to the correct functioning of the system. If you have questions, contact Vertiv and request monitor assistance. Except as explained in this manual, do not attempt to service Vertiv equipment.

Any adjustment, maintenance or repair of this product must be performed by qualified personnel. Contact a Vertiv customer service engineer and request assistance. Only qualified and trained personnel may perform the operations described in this manual. All safety information must be read, understood, and strictly adhered to before installing, powering up or using the equipment or software (the "system".)

### Equipment Operation

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. Refer to this manual for the correct connection and usage of this equipment.

### Fuses

For continued protection, fuses with the required rated current, voltage, and type, such as normal, slow blow, fast blow or time delay, must be used.

### Equipment Access

Operating personnel must not remove equipment covers, shields or panels. Component repair, replacement, and internal adjustments must be made only by qualified service personnel.

### Operating Damaged Equipment

Do not operate damaged equipment. Equipment that appears damaged or defective must be made inoperative and secured against unintended operation until repaired by qualified service personnel. Whenever it is possible that the safety protection features built into this product have been impaired, either through physical damage, excessive moisture or any other reason, remove power and do not use the product until safe operation can be verified by qualified service personnel. If necessary, contact Vertiv to ensure the safety features are maintained.

### Servicing and Adjusting

Do not service or adjust alone. While in the battery circuit, do not attempt internal service or adjustment of this equipment unless another person, capable of calling for or rendering first aid and resuscitation, is present.

### Substituting Parts or Modifying Equipment

Do not substitute parts or modify equipment. Due to the possibility of introducing additional hazards, do not substitute parts or perform any unauthorized modification to the product. If necessary, contact Vertiv to ensure the safety features are maintained.

## Safety Information

---

### **Insulation Rating For Wires**

Use only wire supplied with the installation kit.

### **Ventilation**

Never block equipment ventilation ports or openings. The equipment must have adequate ventilation to prevent overheating. Ensure equipment is operated within specified temperature and humidity ranges.

## 2. Preventive Maintenance

This section describes preventive maintenance for the UXIMe system.

### 2.1 Visual Inspection

Visually inspect all monitor system components for damaged or frayed power cords and cables and for damaged component panels, controls, and connectors. When damage is detected, remove the equipment from service until the damage is repaired.

### 2.2 System Component Cleaning

Clean system components using a soft cloth. Do not use commercial or industrial cleaners that may attack the computer display and housing. Never expose the computer or system components to water, high humidity or dampness.



**Warning:** Before cleaning equipment, ensure the system is disconnected and power to the units has been shut off. You must disconnect the system components and the monitor system cabinet, if a cabinet is being used, from AC and/or DC power sources.

### 2.3 Sense Lead and Ring Terminal Cleaning

On some applications, cleaning the sense leads where they connect to the battery may be necessary. This is normally needed when monitoring flooded batteries because electrolyte can drip or splash onto the sense lead connections. Sense leads exposed to electrolyte must be neutralized. Follow the battery manufactures recommendations for cleaning battery connections.

### 2.4 Internal Component Replacement

The monitor system has no user replaceable components. Since high voltage exists in most of the system components, only knowledgeable users should remove the covers from components. Failure to comply with this restriction could pose a safety hazard and/or void the product warranty.

### 3. System Overview

The Universal Xplorer Industrial Monitor (UXIMe) is a stationary battery monitor designed for use in Industrial or Utility applications. With standard configurations specifically designed for Utility Substations, make it ideal for NERC compliancy. Each monitor is considered a stand-alone system, in that no external computer is required for normal operation with standard provisions to integrate to customer owned Building Management or Enterprise Systems.


Complete and comprehensive remote monitoring capabilities include features you expect.

- Remote access via Ethernet or RS-485 using industry standard protocols such as Modbus or SNMP for simple BMS integration.
- Embedded Web servers permit Web browsing from any PC on the network for quick real-time battery viewing to inspect data in easy to interpret graphical views for all cell and string level parameters, active monitor status and state of active or latched alarms.
- Embedded email clients for alarm notifications and data delivery of battery parameters (XML format) with priority handling of message sent to responsible service technicians.
- Local service port USB connectivity to view and analyze battery systems using laptop computers.

With the UXIMe, all your battery parameters are measured and constantly monitored against user defined thresholds. And what sets Vertiv monitors apart from others is the ability to provide early warning of potential battery problems by performing a proactive, patented resistance test, a proven technology to reliably predict battery performance. To complement the proactive resistance test, other parameters monitored to ensure optimal battery performance and battery life are as follows:

- Cell Level Measurements
  - Individual Cell Resistance
  - Individual Cell Voltage
  - Individual Intercell Resistance
  - Electrolyte Level (Optional)
- System Level Measurements
  - Overall Volts
  - String current (Discharge/Float)
  - Ripple Current
  - Ambient Temperatures
  - Charger Cable Resistance
  - Ground Fault Currents

## System Overview

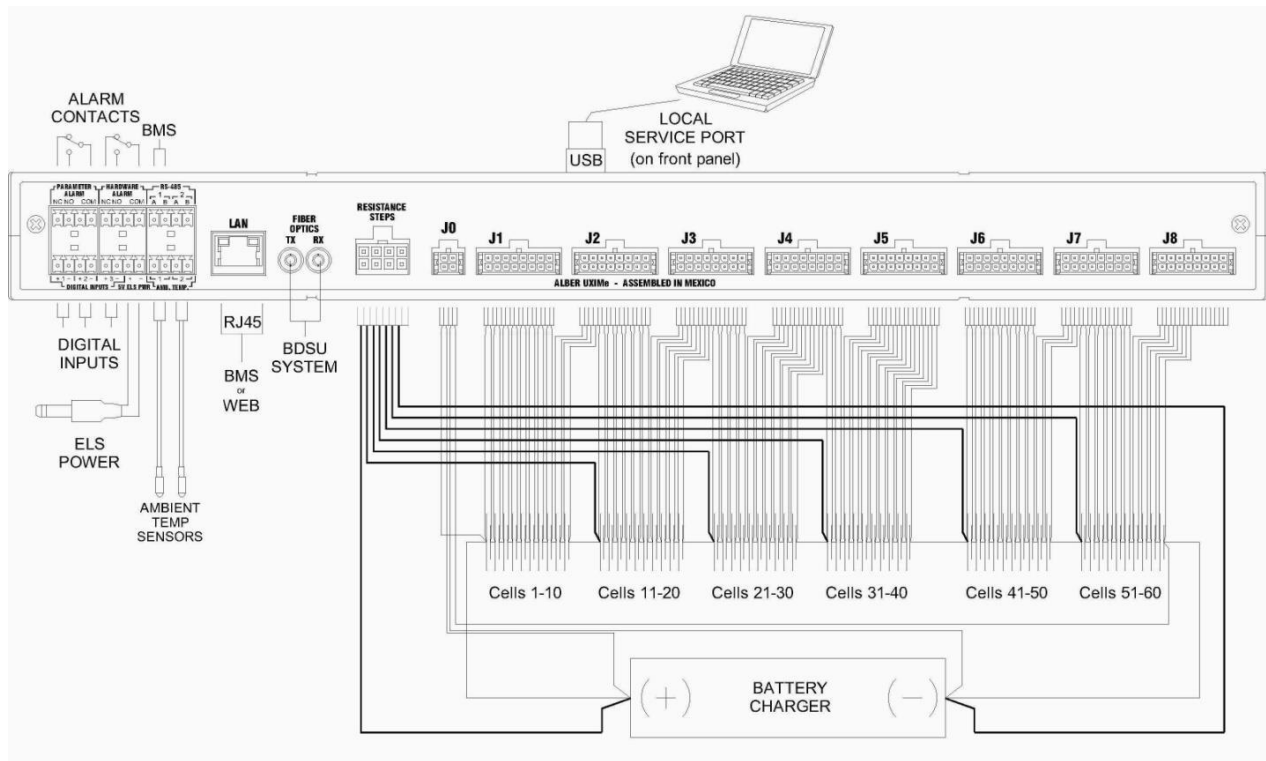

**Figure 1 - Typical System Connection**

## 4. System Installation



**Note:** The UXIMe must be installed in a restricted access location.

UXIMe installation requires nothing more than standard hand tools, cutters, strippers and screwdrivers. If the unit is to be wall mounted, a drill will also be required.

The following is a list of the steps required for successful UXIMe system installation. Some items may not apply due to system requirements.

<b>Installation Task</b>	<b>Refer to Section</b>
Verify materials ordered and received	Materials Received List, page 5-1
Items to consider before system installation	System Installation Considerations, page 6-1
Isolate the battery string	Battery String Isolation, page 6-1
Identify cell/monobloc Number 1	Cell Number 1 Identification, page 6-1
Properly install the tab washers	Installation of Tab Washers, page 7-1
Configure the unit	Unit Configuration, page 8-1
Mount the equipment	Equipment Mounting, page 9-1
Connect the sense lead harnessing	Sense Lead Harness Connection, page 10-1
Connect the fused load lead harnessing	Fused Resistance Load Lead Harness Connection, page 11-1
Connect the ambient temperature sensor	Charger Cable Resistance Reading Connection, page 12-1
Connect the digital inputs if applicable	Digital Inputs Connection, page 14-1
Connect RS-485 communications if applicable	RS-485 Communication Connection, page 15-1
Connect the fiber optic interface if applicable	Fiber Optic Communication Connection, page 16-1
Connect the Network communications if applicable	Network Communication Connection, page 17-1
Connect the alarm contacts if applicable	Parameter Alarm Connection, page 18-1
Connect the Hardware alarm contacts if applicable	Hardware Alarm Connection, page 19-1

**Table 1 - Installation Task List**



## 5. Materials Received List

The following is a list of material that may have been received with your shipment. Refer to the packing slip delivered with the equipment for a complete list of materials supplied. Vertiv suggests you inventory all materials to ensure the order is complete. Report any shortages to Vertiv immediately.








The model number is in the format of PPPP-COB, where PPPP is 1010 and C, O, and B are described below.

PPPP-	C	O	B	Description	Choices
<b>1013</b>	C			Communications	0 = RS-485 Only 1 = Network 2 = Fiber Optic 3 = Network and Fiber Optic
<b>1013</b>		O		Options	0 = None 1-9 = Reserved
<b>1013</b>			B	Branding	0 = OEM 1-9 = Reserved

**Table 2 - Model Number Description**

Part Number	Photo/Drawing	Description
1013-### ###= (See Table 2)		UXIMe Battery Monitor module One module per system
1102-550-25 1102-550-50 1102-550-75 1102-550-100		25', 50', 75' or 100' Pulsed Load Lead harness One pulsed load lead harness per system







**Materials Received List (continued)**

Part Number	Photo/Drawing	Description
1102-553-08 1102-553-25 1102-553-35 1102-553-50 1102-553-75 1102-553-100		8', 25', 35', 50', 75' or 100' Single Ambient Temperature Sensor harness One single ambient Temperature sensor harness per system.
1102-554-08 1102-554-25 1102-554-35 1102-554-50 1102-554-75 1102-554-100 (Optional)		8', 25', 35', 50', 75' or 100' Double Ambient Temperature Sensor harness (optional) One ambient temperature sensor per system
1102-560-25 1102-560-50 1102-560-75 1102-560-100		25', 50', 75' or 100' Sense Lead harness Maximum eight sense lead harnesses per system
2025-108		USB cable One USB cable per system
1102-551		Fused Load Lead assembly Seven fused load lead harnesses per system
4301-015		Fuse, 15A Slo-Blo (MDA-15-R) Seven 15A Slo-Blo fuses per system
1102-552-25 1102-552-50 1102-552-75 1102-552-100		25', 50', 75' or 100' Charger Sense Lead harness One charger sense lead harness per system



Materials Received List

**Materials Received List (continued)**

Part Number	Photo/Drawing	Description
1102-555		10K 0.1% Resistor Sense Lead Assembly 136 resistor sense leads per system
2120-164		Single Tab Washer (5/16") 140 tab washers per system (other sizes available upon request)
2027-029		UXIME Configurator Software installation CD
KIT 1400-531 (Optional)		Flush mounting kit (Optional)
3703-006 (Optional)		Fiber Optic Cable (Optional) Communication link between units Quantity specified at time of order
KIT-3703-015 (Optional)		Fiber Optic Polishing Kit (Optional) The kit provides the user with polishing materials to terminate the ends of plastic optical fiber correctly.

**Table 3 - Inventory List**

## 6. System Installation Considerations

This section describes items that should be considered before installing the UXIMe system.

### 6.1 Disconnect Device

The Pulsed Load Lead harness which plugs into the Resistance Steps connector is the primary disconnect device. Unplug this connector to disconnect power from the UXIMe.

### 6.2 Equipment Location

Consider the placement of the equipment in the event service is required. For example, access to the rear of the equipment or visual access to the status lights may be needed. The equipment is convection cooled and no cooling fans are used. To maintain proper operating temperature, the equipment must not be enclosed in another cabinet without proper ventilation.

### 6.3 Rack Mounting

If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature specified in the Product Description Guide. Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised. Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.

### 6.4 Mounting Options

The equipment can accommodate two types of mounting: 19" rack mount or flush mount. Standard mounting is 19" rack mounting. If the flush mount option is used, the optional flush mounting brackets will need to be installed.

### 6.5 Wire Length

All harnesses lengths are standard 25' or 50' length and in most cases, should not require additional lengths. Distances between the battery, battery charger and the battery monitoring equipment should be considered. If longer harness lengths are required, harnesses are available in a maximum of 50' lengths. The resistance load test-wiring limits this length to the maximum distance the UXIMe can be mounted from the battery string. This manual describes all harnesses at the standard 25' or 50' length.

### 6.6 Battery String Isolation

Isolate the battery string prior to installing the system.

**Important!** Never attempt installation on a battery string that is in service and not fully isolated from the DC bus and load circuits.

### 6.7 Cell Number 1 Identification

When referring to any material in this installation guide and reference is made to an actual cell number, always consider Cell 1 as the most positive end of the battery with respect to the battery charger. As the cells increment toward the negative end of the string, increment the cell numbers as well.

## 7. Installation of Tab Washers

Tab washers allow connection of the monitoring system to the battery. Standard tab washers accommodate 5/16" hardware. The tab washer location and quantity depend on the system configuration. The actual placement of these tab washers in relation to the battery post and existing hardware is critical. In instances where a single load tab washer and a sense tab washer(s) is required, the load tab washer should be placed closest to the cell post and underneath the sense tab washer. The following figures illustrate some common applications.


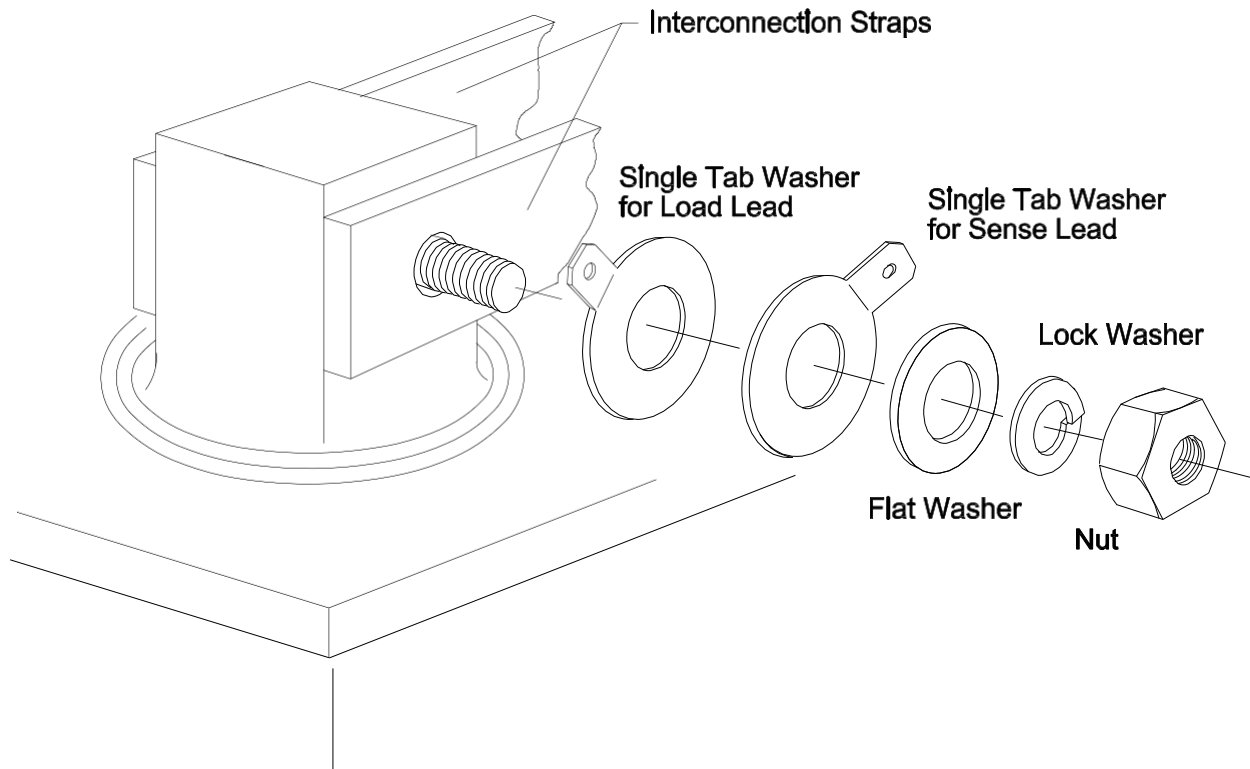


Figure 2 - Exposed Post Tab Washer Assembly

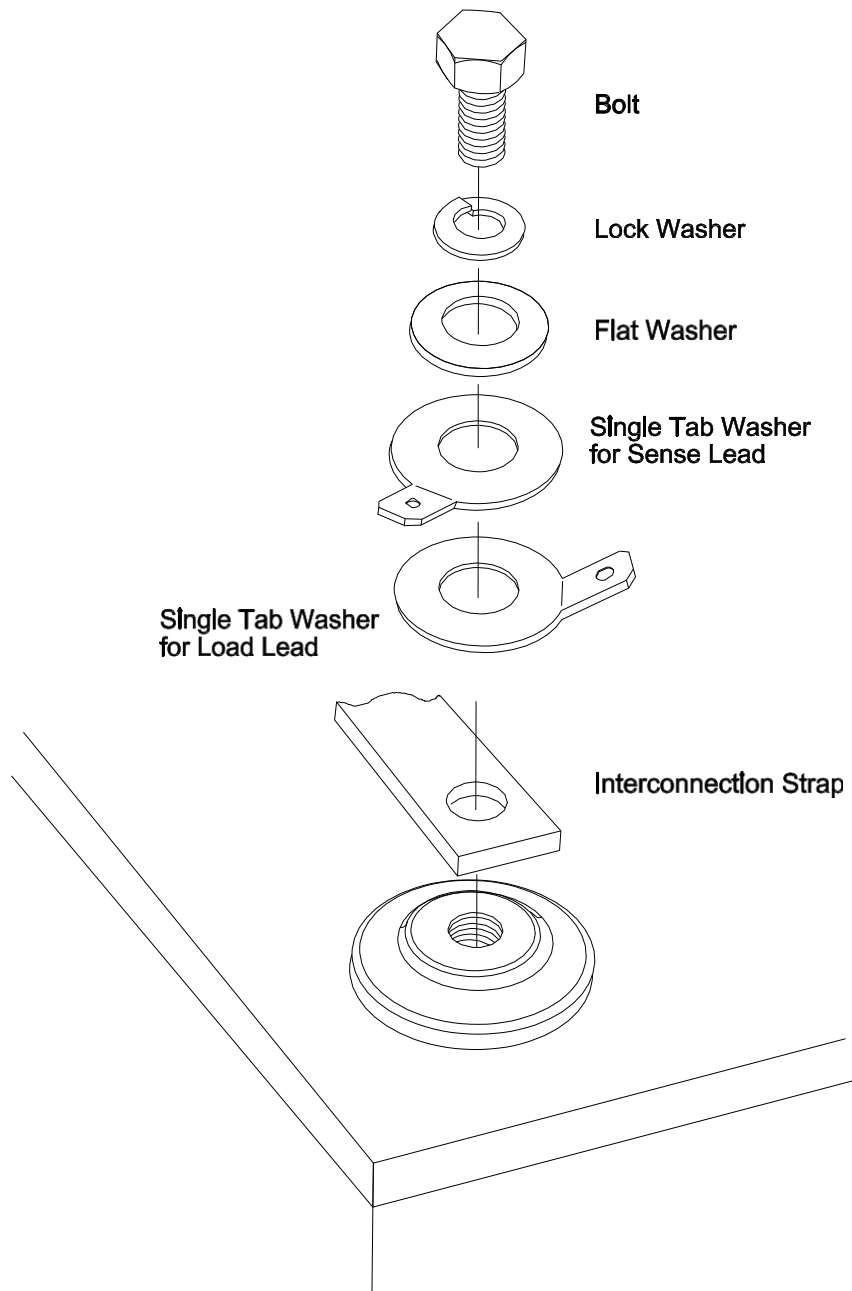

**Figure 3 - Recessed Post Tab Washer Assembly**

To determine tab washer placement, refer to the Configuration Connection Diagram in the back of this manual. Locate the desired configuration that will be installed. Using the wiring diagram, install the appropriate tab washer(s) on each required post.

## 8. Unit Configuration

### 8.1 Digital Input Configuration

Each digital input can be configured either for a voltage or contact closure input. Refer to the table below.

**Note:** Digital input configuration should only be performed by a qualified technician. Contact Technical Support for details.

Mode	Acceptable Input Range
Voltage	> 4V = False < 1V = True Maximum nondestructive input: 60Vdc
Open/Close Contact	< 2K = True

**Table 4 - Digital Input Modes**

Seven jumpers for digital input and one jumper for RS-485 are supplied with the UXIMe for configuration. There is a pair of 2-pin jumpers associated with each digital input, which must be set according to the mode desired. The cover of the unit must be removed to gain access to these jumpers. Jumpers should only be changed by a certified Vertiv technician. Refer to the following table and drawing to identify what mode is required and where the jumpers are located.

Channel	Mode	Jumpers
Digital Input 1	Voltage	JP2 and JP3 are not installed
	Open/Close Contact	JP2 and JP3 are installed
Digital Input 2	Voltage	JP4 and JP5 are not installed
	Open/Close Contact	JP4 and JP5 are installed
Digital Input 3	Voltage	JP6 and JP8 are not installed
	Open/Close Contact	JP6 and JP8 are Installed

**Table 5 - Digital Input Jumper Settings**

## Unit Configuration

The location of the jumpers is shown in the figure below. The factory does not have the jumpers inserted.

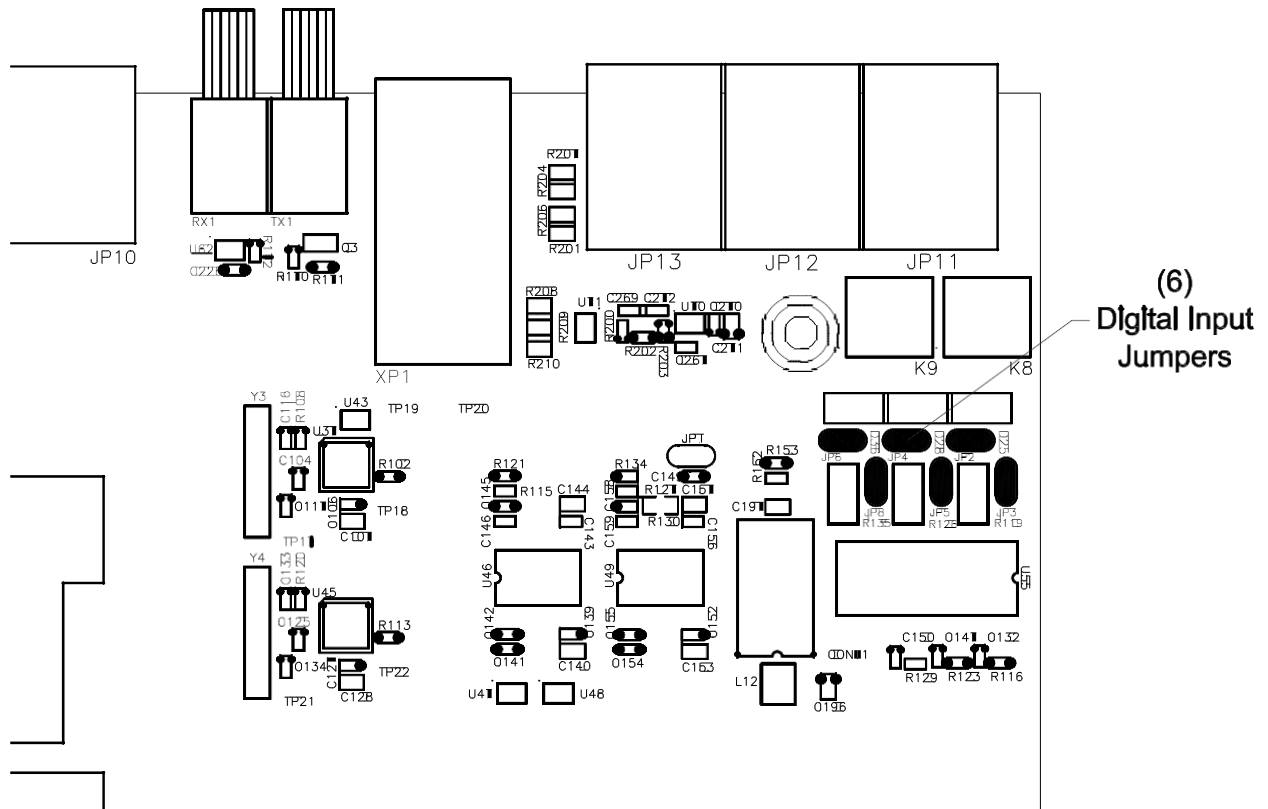


Figure 4 - Digital Input Jumper Locations

## 8.2 RS-485 Termination

A jumper on the circuit board is used for selecting a termination resistor for RS-485 connection. In most cases, RS-485 termination is not necessary because maximum baud rate is 19200 bps (default is 9600). RS-485 termination is recommended when intermittent communications occur. RS-485 termination is enabled when the jumper is across Pins 1 and 2 of JP7 (not the factory default setting). It is disabled when the jumper is removed across Pins 1 and 2. The location of the jumper is shown in the figure below.

**Note:** The factory default setting will not include the jumper inserted across Pins 1 and 2 of JP7.

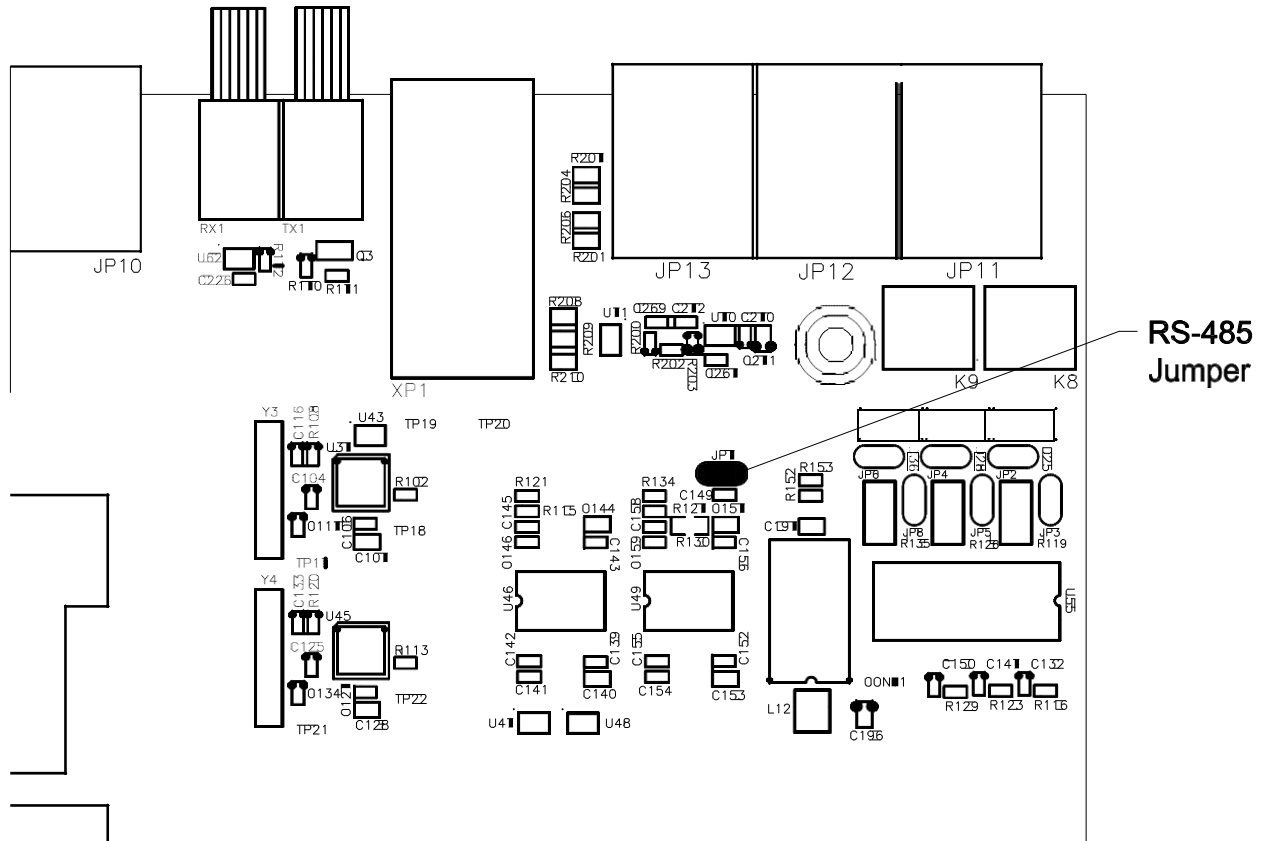


Figure 5 - RS-485 Jumper Locations

## 9. Equipment Mounting

The equipment can accommodate two types of mounting: 19" rack mount or flush mount. Standard mounting is 19" rack mounting. For 23" rack mounting, 1U rack reducing brackets are commercially available and would be required.

### 9.1 Flush Mounting Kit (Optional)

If the flush mount option is required, optional angle brackets will need to be installed on each side of the unit. To connect the flush mount brackets to the unit, remove the two screws on each side that secure the rack mount brackets to the unit. Install the supplied front spacer brackets using the top mounting hole and the flat head screws from the rack mount bracket. Remove the lower flat head screw from the rear spacer bracket. Secure the flush mount bracket through both the bracket and bracket spacer using the rack mounting kit-supplied pan head screws at both the front and rear locations for each side. Flush mounted equipment footprint is shown below.

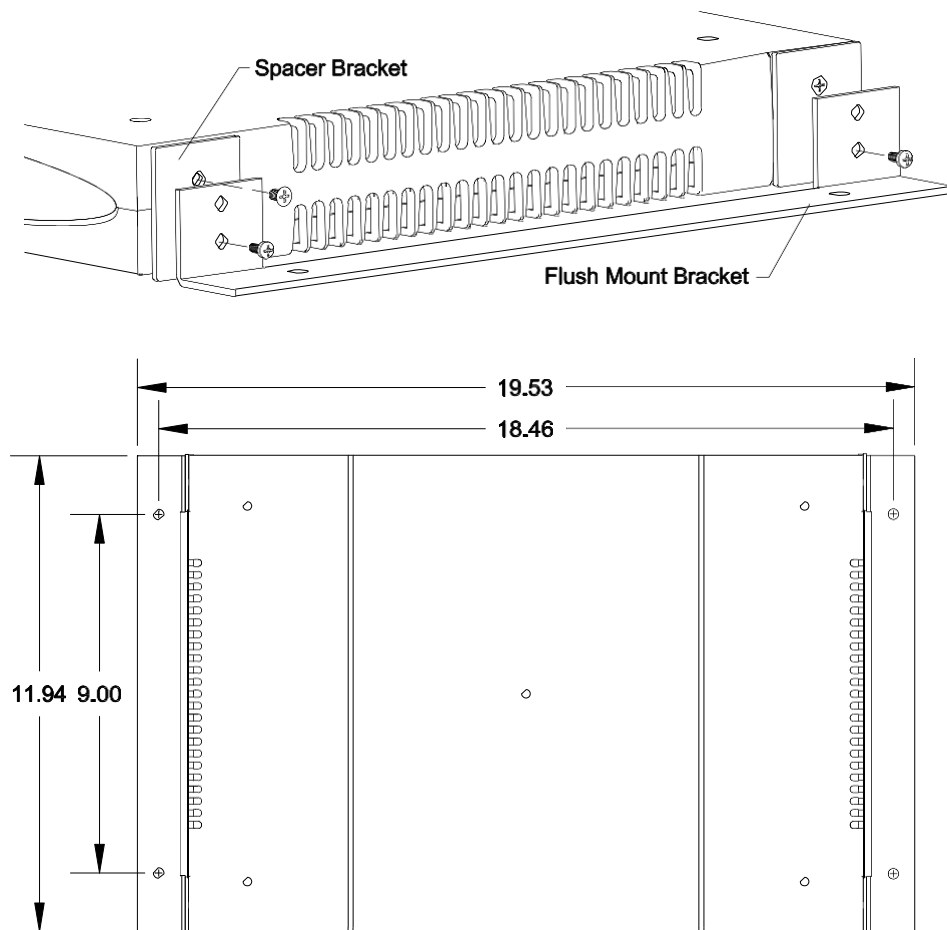


Figure 6 - Optional Flush Mount Kit Mounting



## 10. Sense Lead Harness Connections

Refer to the Wiring Schematic Diagram located at the rear of this manual to determine the routing path from each Sense Lead harnesses' connection point (J1-J8) on the equipment to the required cell voltage sense point on the battery. Note that wires terminating on a positive post are solid colors. Wires terminating on negative posts are white with colored stripe. For ease of future cell maintenance, leave some slack in the wiring to the cells. A write-on label is provided on each harness to mark the correct harness assembly number to appropriate equipment connector location of the harness. If the connections are removed for maintenance, the labels on the harness will be a useful reference to reconnect the cables to the correct connector. Refer to the following steps to install the proper termination to each battery connection point.

### 10.1 Voltage Sense Lead Connection Preparation

In order to prepare the sense lead harness connection, follow these steps:

1. Each voltage sense lead wire from the sense lead harnesses must have a 10K $\Omega$  0.1% flameproof resistor sense lead assembly installed before connection to the tab washer.
2. After determining the routing path and required wire length from the equipment to the connection point, begin assembling the 10K resistor sense lead assembly to the sense lead harnesses by cutting each wire to the required length and strip the wire at approximately  $\frac{1}{4}$ " of the insulation from the end of the wire.
3. Place the stripped wire into the butt-splice of the 10K $\Omega$  0.1% resistor sense lead assembly.
4. Place the wire and insulated section of the butt-splice into the first die of the Panduit crimper, making sure that the intersection is centered within the die.
5. Crimp the connection.
6. Check the crimped connection to make sure it is secure and holds well.
7. Connect the completed voltage sense lead to its appropriate cell sensing point tab washer.

## Sense Lead Harness Connections

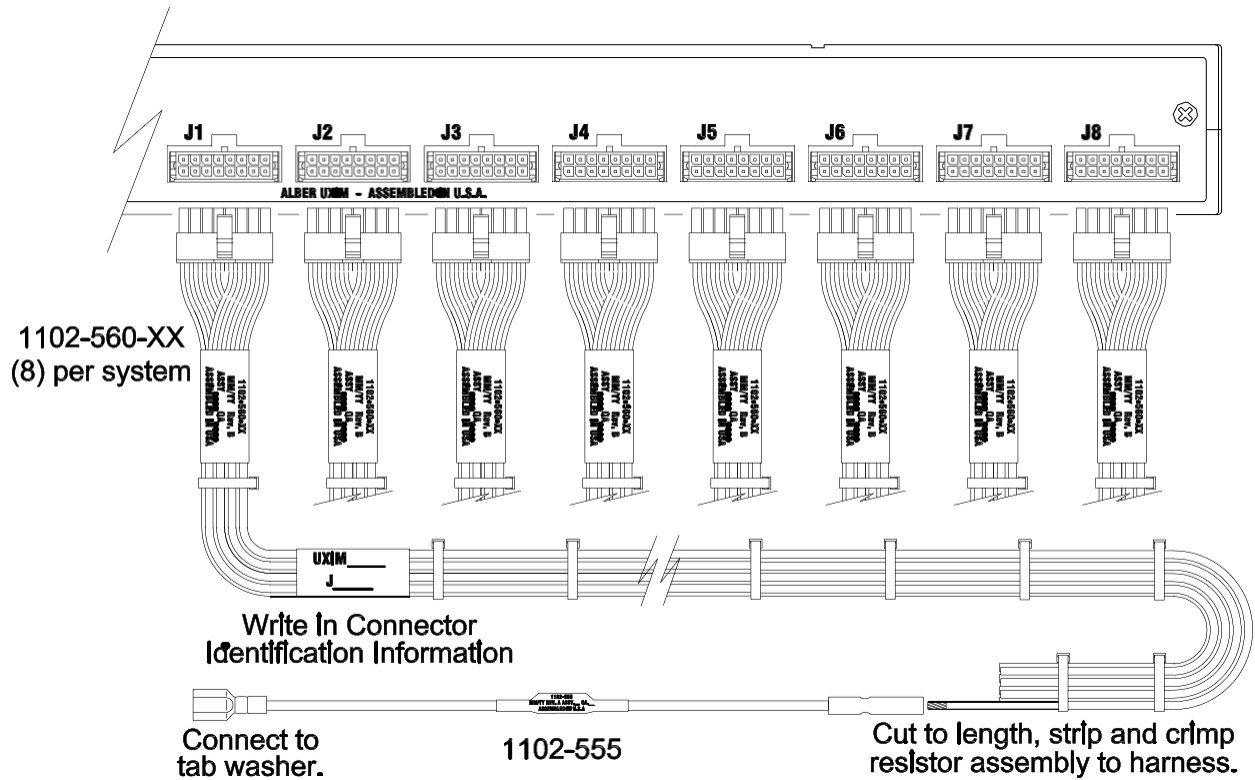


Figure 7 - Voltage Sense Lead Connections to Battery

XX= cable length

**Caution:** When a load lead wire connects to the same point as a voltage sense lead, the load lead wire must be the closest to the cell's post. Verify the fuse is a 15A Slo-Blo.

## 10.2 Systems with Dual or Multiple Positive and Negative Posts

Systems that use dual or multiple positive and negative post interconnections require connection of the sense lead harnesses using the following guidelines. The positive sense lead wires (solid colors) and negative sense lead wires (white with colored stripe) of the harness attach to the corresponding positive and negative terminals of the battery in a way that will monitor as many strap connections as possible. To achieve optimum results, it is recommended that sense leads should be connected as described in the Figure below and duplicated at each cell for consistent readings. The following illustration shows a scenario of dual and/or multiple positive and negative posts as described.

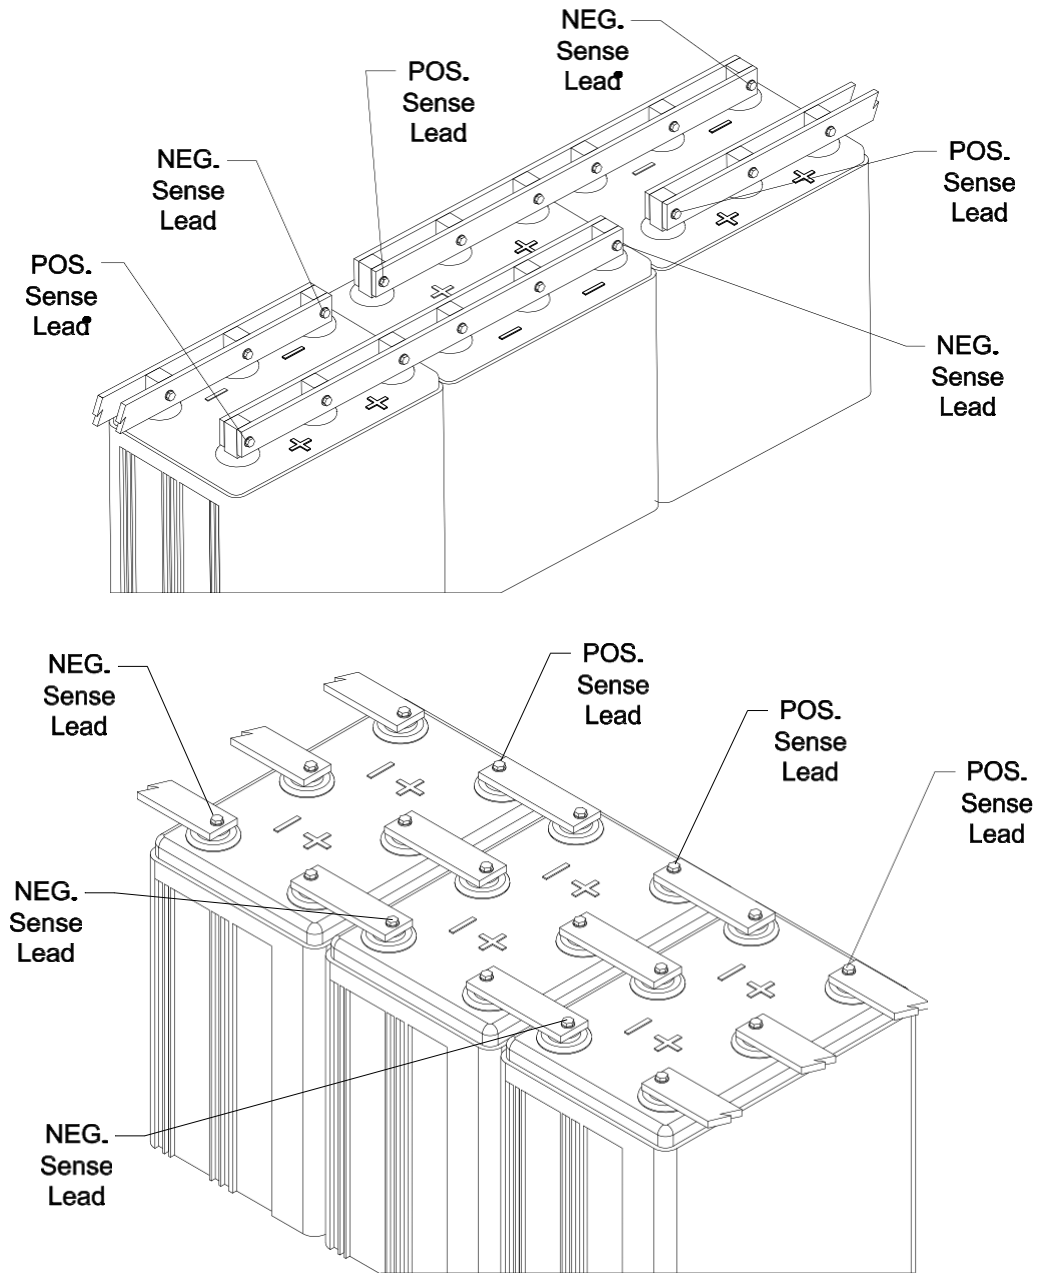


Figure 8 - Exposed Dual or Multiple Posts Connections

## 11. Fused Resistance Load Lead Harness Connections

There is a maximum of seven load connections available. To identify connection locations, refer to the Resistance Steps section of the UXIMe Wiring Schematic drawing at the back of this manual. This drawing shows exact locations where these cables connect to the battery for each supported configuration.

**Warning:** Before making any connections to the battery, verify the fuses are not installed in the load lead fuse holders. Do not install the fuses until the time that the entire system is commissioned.

Each Resistance Load cable assembly is made up of seven color-coded load wires to distinguish each resistance load step for proper termination at the battery. From the UXIMe, the Resistance Load cables are routed to the installation location and cut to the appropriate length. For ease of future cell maintenance, leave some slack in the wiring to the cells. The wire should be stripped to remove approximately 5/16" of insulation and crimped into the butt splice on the Fuse Holder Assembly. When connecting to the charger bus, it may be required to replace the 10K resistor leads and or load lead's faston™ terminal with a ring terminal to complete connection to the bus. Proper location and crimp termination of these cables are critical and could cause equipment failures if done improperly.



**Note:** When installing load lead cables, cut them to the appropriate length. Do not coil these cables. Failure to cut cables to the correct length could result in inaccurate readings.

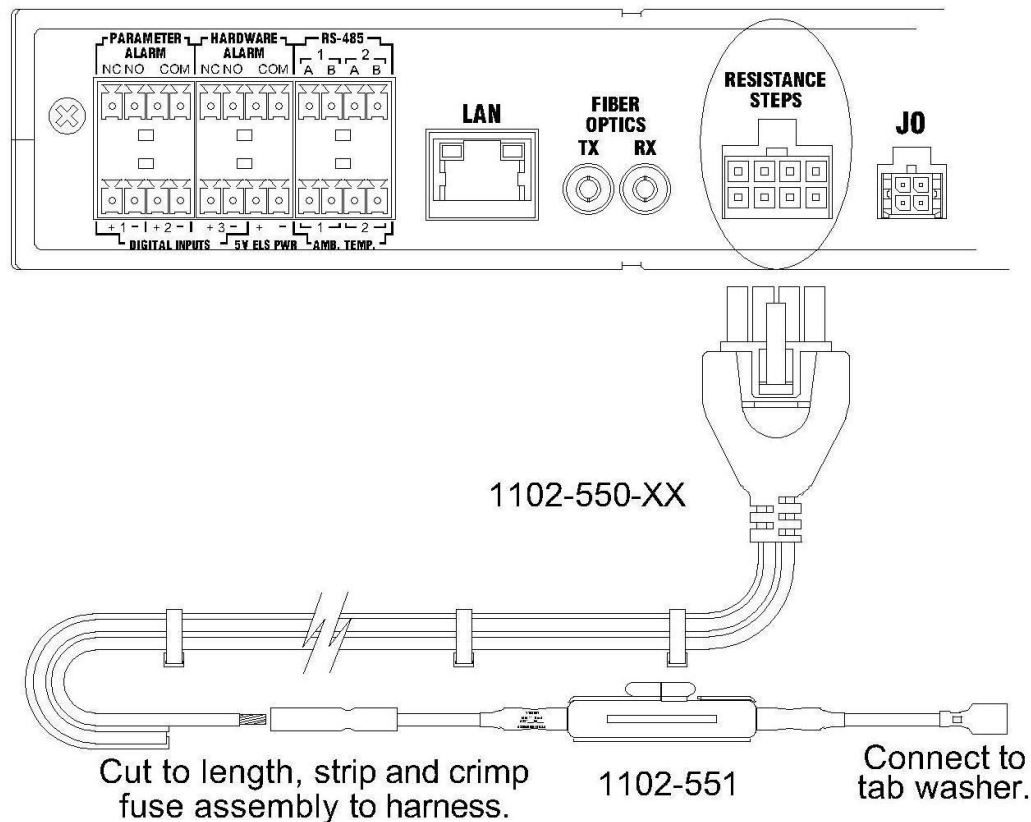


Figure 9 - Resistance Steps Connection to Battery

## Fused Resistance Load Lead Harness Connections

---

The fused load lead will be positioned on a single tab washer. In situations where there are sense and load leads at the same location, it is critical that the load connection be placed closest to the battery post. Before installation on the tab washer, verify that the fuse is not installed. The fuse will be installed at time of startup.



**Note:** It is very important that the load connection is the closest connection to the post if two tab washers are used. Failure to do this could result in inaccurate resistance readings.



**Caution:** Connecting the load wires incorrectly could cause an equipment failure if a resistance test is performed. Such failures are not covered under warranty.




**Warning:** Do not install load lead fuses until instructed to do so in the Getting Started Guide.




## 13. Ambient Temperature Sensor Connection

There is one ambient temperature sensor included with each unit. This sensor comes with a prefabricated harness with 25', 50', 75' or 100' of cable. Route the cable to the desired location to capture ambient room temperature and plug the connector into the rear of the unit.

**Note:** The UXIMe device comes with one single temperature harness. A dual harness can be purchased through your Vertiv Sales representative. Either a single or dual harness can be used on the UXIMe.

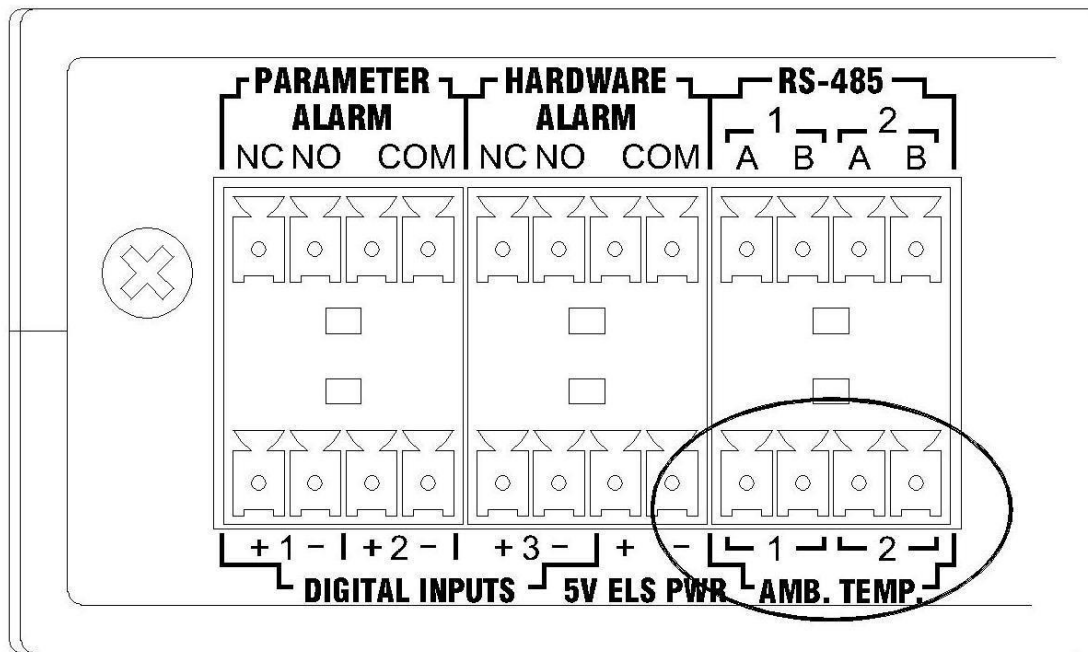

1102-553-XX (Standard)



1102-554-XX (Optional)

**Figure 11 - 25', 50', 75' or 100' Single and Dual Ambient Temperature Harness**

## 14. Digital Inputs Connection

There are provisions for three separate digital inputs. These can be configured to operate in two different ways. Refer to Digital Input Configuration section on page 8-1 for configuration details. To connect the device monitored, connect to one of the three inputs located on the rear of the unit. If only a switch "open/close contact" mode is being used, then polarity is not important. However, if a voltage source is being used, then the polarity will need to be correct.

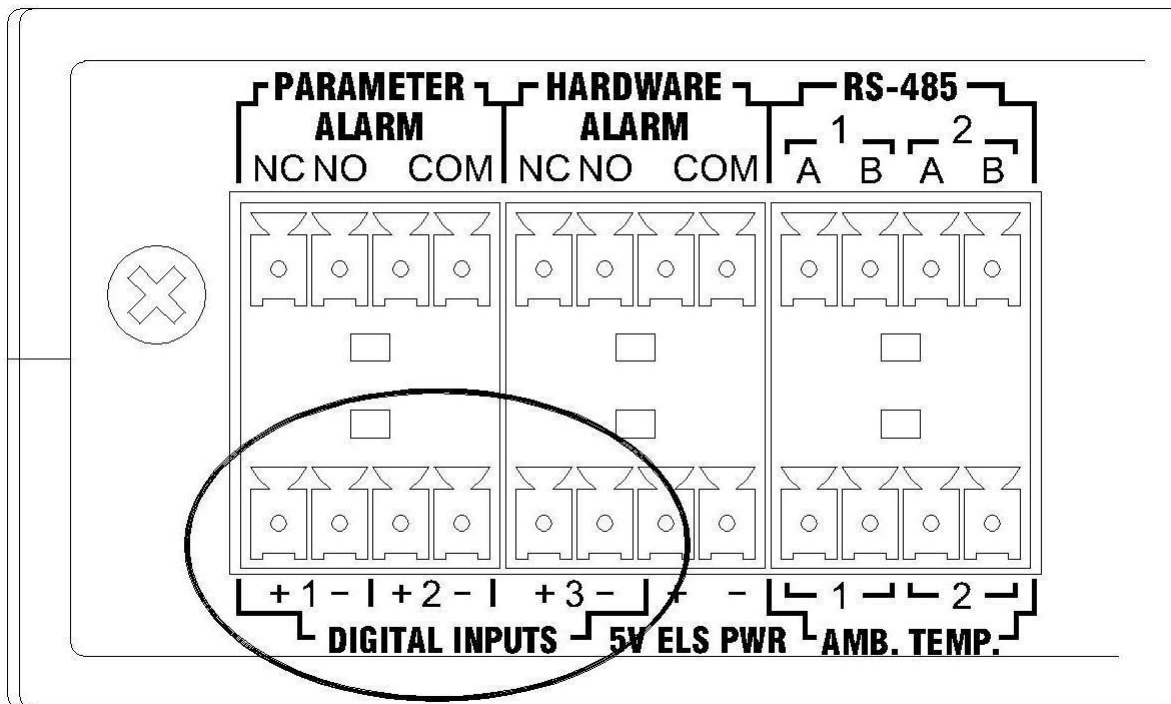


Figure 12 - Digital Inputs



**Caution:** Pay close attention to polarity and voltage when making these connections. Connecting the digital inputs polarity backwards or exceeding 60Vdc in voltage mode will damage the equipment.



## 15. RS-485 Communication Connection

There are two RS-485 ports available for communications between the UXIMe and remote controllers (BMS) or accessory modules (not currently supported). Each of these ports is labeled 1 and 2. When connecting to a remote controller, connect the A & B connection of port 1 to the remote controller. When multiple units are used together and need to be connected to a remote controller, these modules can be networked together using the RS-485 (1) terminals A & B. See the figure below.

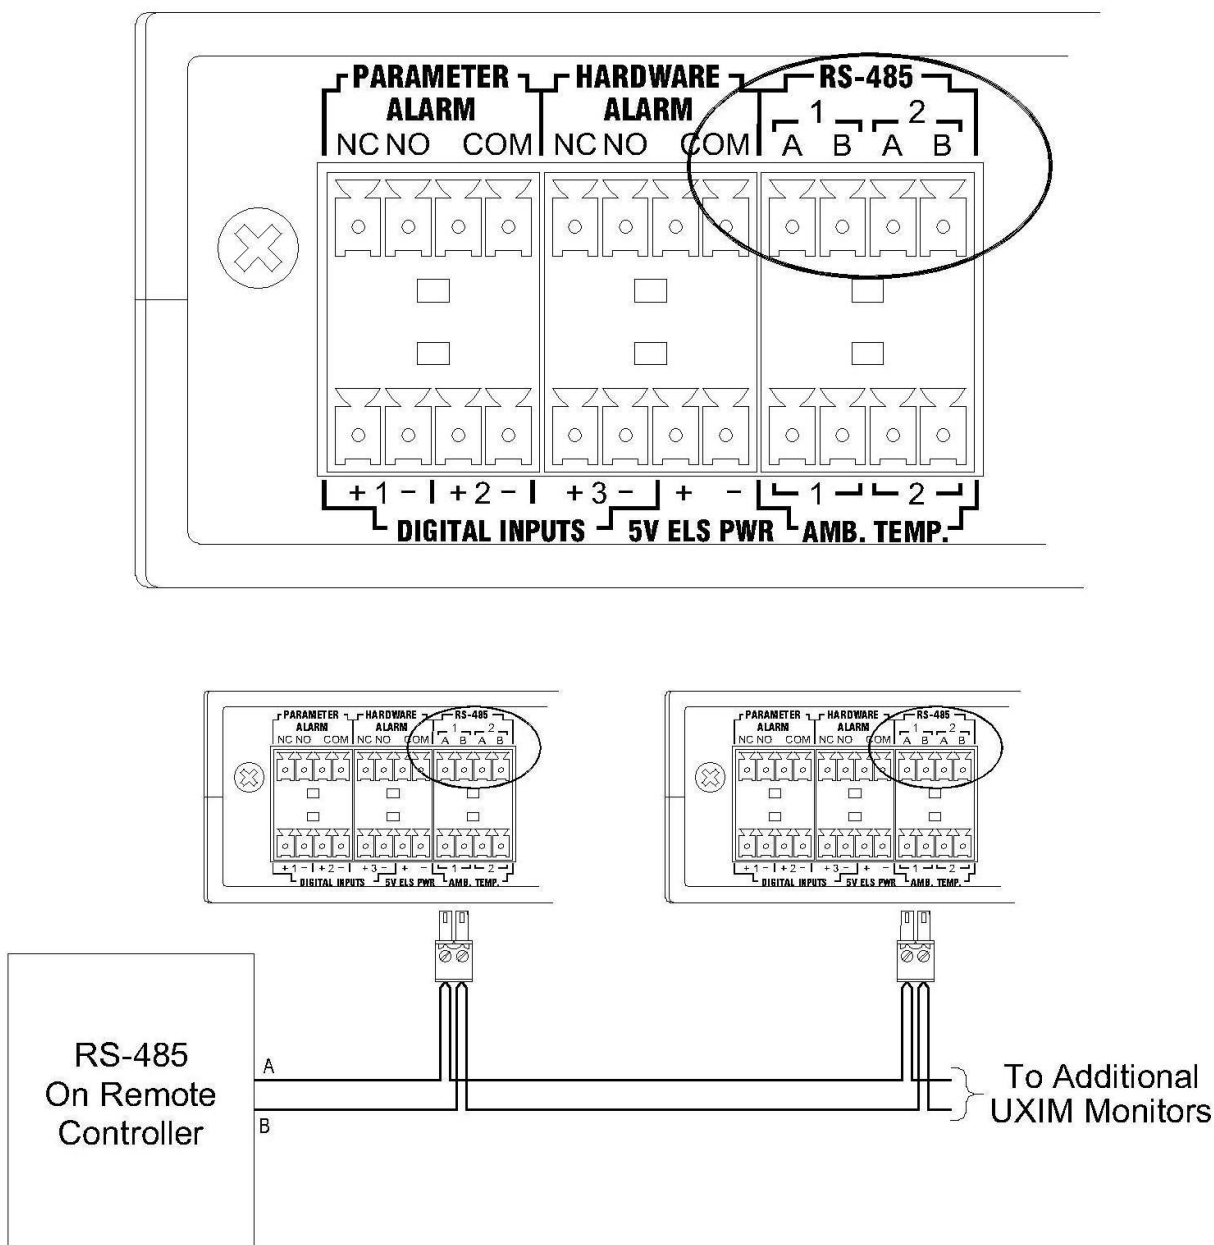


Figure 13 - RS-485 Connections

## 16. Fiber Optic Communication Connection

The Fiber Optic ports are an optional communications port used to connect to a BDSU Linker module - UXCM. When integrated with a UXCM, the UXIME will inherit a host of advanced features outlined in the BDSU Product Description Guide.

To connect to a UXCM, use the supplied fiber optic cable (if option is installed) and connect the TX of the UXCM to the RX of the UXIME and then the TX of the UXIME to the RX of the UXCM.

When cutting the fiber optic cable to length, the ends must be properly cut and polished to achieve reliable communications. Follow the instructions supplied with the polishing kit.

When routing and terminating the fiber optic cable, the following should be considered.

- The minimum bend radius should not be less than 35mm or 1.4"
- The maximum length between modules cannot exceed 250' or 76 meters. Exceeding 250' will cause degradation in the signal which will manifest itself as intermittent or no communications.

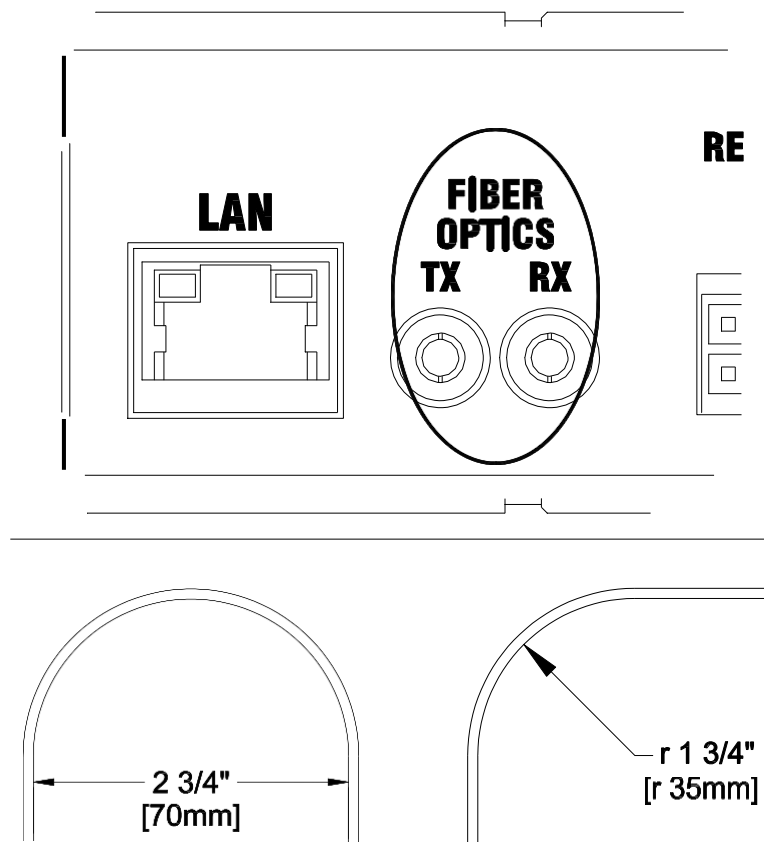


Diagram Not To Scale

Figure 14 - Minimum Fiber Optic Bend Radius

## 17. Network Communication Connection

The LAN network connector allows the UXIME to be connected to a Ethernet network. From an existing network, connect the network cable to the LAN connector on the UXIME.

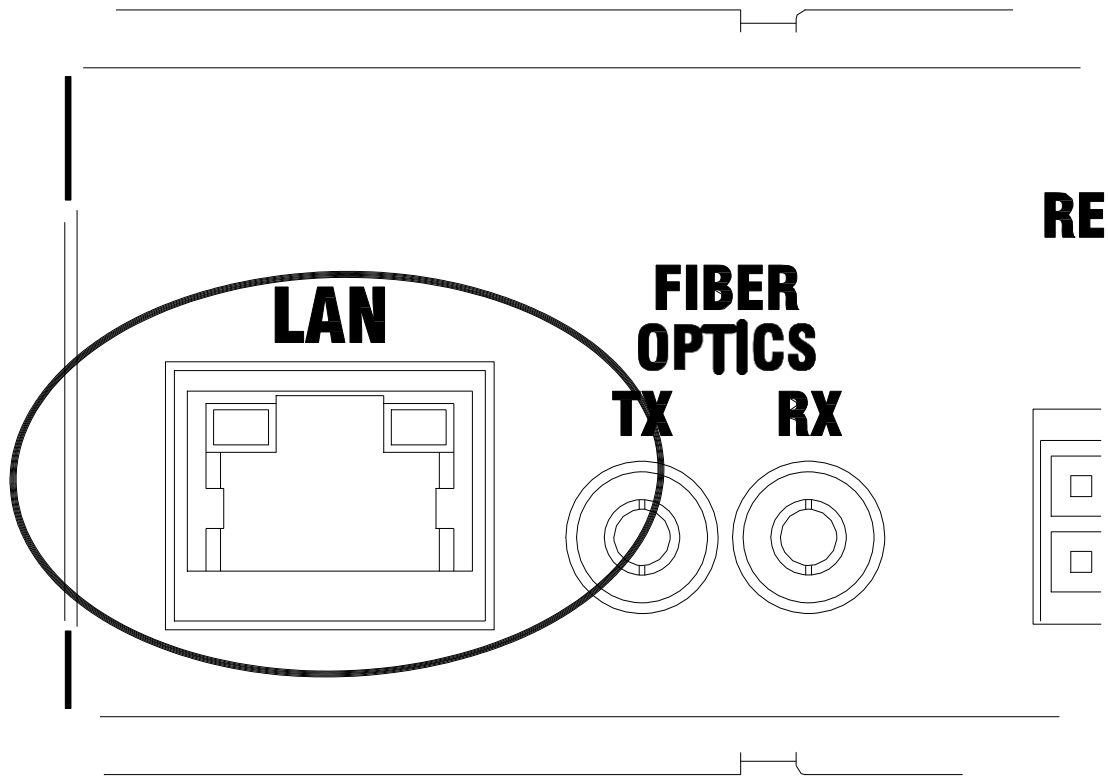


Figure 15 - Network Connection

### 17.1 Network Protocols Supported

There are several protocols supported by the network interface and will require specific ports to be opened up on the network. The following lists the supported protocols that can be used:

- TCP 502 (Modbus)
- TCP 3002 (Application debug port)
- TCP 9999 (Telnet setup)
- TCP 10001 (TCP to serial pass through)
- UDP 69 (TFTP), only to load code updates
- UDP 161 (SNMP)
- UDP 162 outbound (SNMP traps)

## 18. Parameter Alarm Connection

The Parameter Alarm Form C alarm provides notification if a monitored parameter exceeds any of the programmed thresholds. This contact has three connections:

- NC (normally closed)
- NO (normally open)
- COM (common)

Connection can be made directly to the facility's alarm reporting system. If multiple units are used, then these contacts can be connected in series or parallel, depending on the requirements for the facility's wiring of NC (normally closed) or NO (normally open).

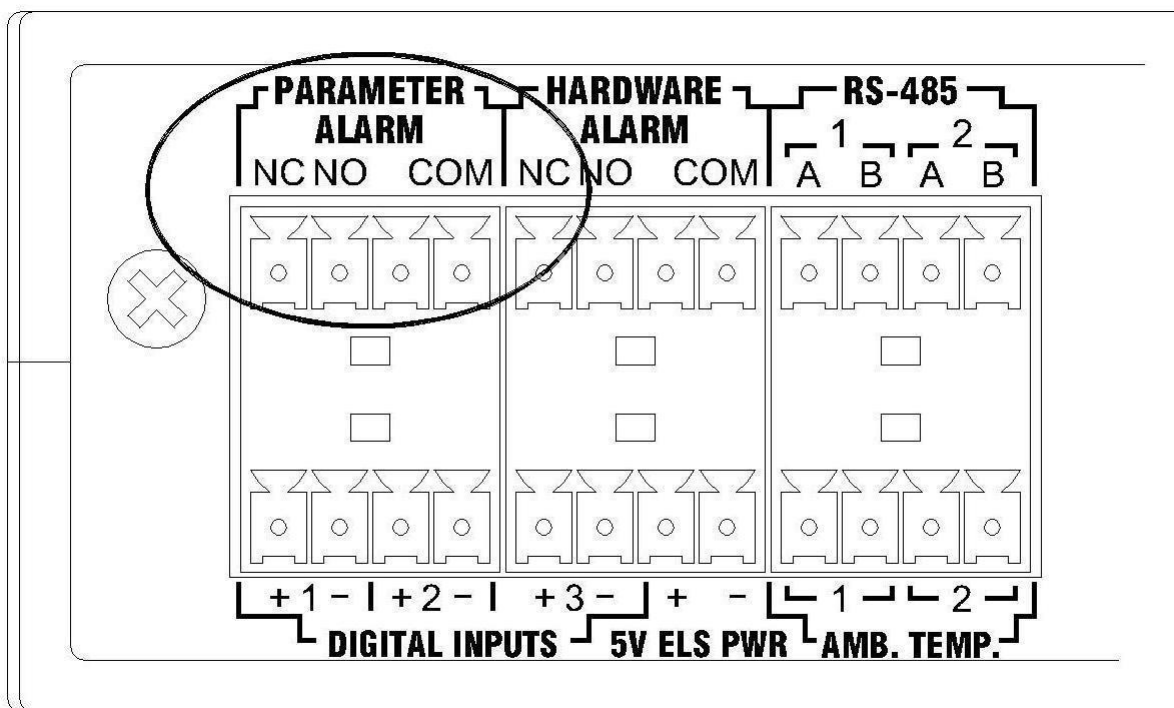


Figure 16 - Alarm Contacts

## 19. Hardware Alarm Connection

The Hardware Alarm Form C alarm contact provides notification if a hardware failure has been detected within the UXIME. This contact has three connections:

- NC (normally closed)
- NO (normally open)
- COM (common)

The normally open (NO) contact becomes active after successful bootup of the UXIME and stays in this state during normal operation. The relay changes state and the normally closed (NC) contact becomes active during any of the following fault conditions:

1. Power fault
2. Application code fault accompanied by an unsuccessful recovery
3. MLM (load module) failed

Connection can be made directly to the facility's alarm reporting system. If multiple units are used, then these contacts can be connected in series or parallel, depending on the requirements for the facility's wiring of NC (normally closed) or NO (normally open).

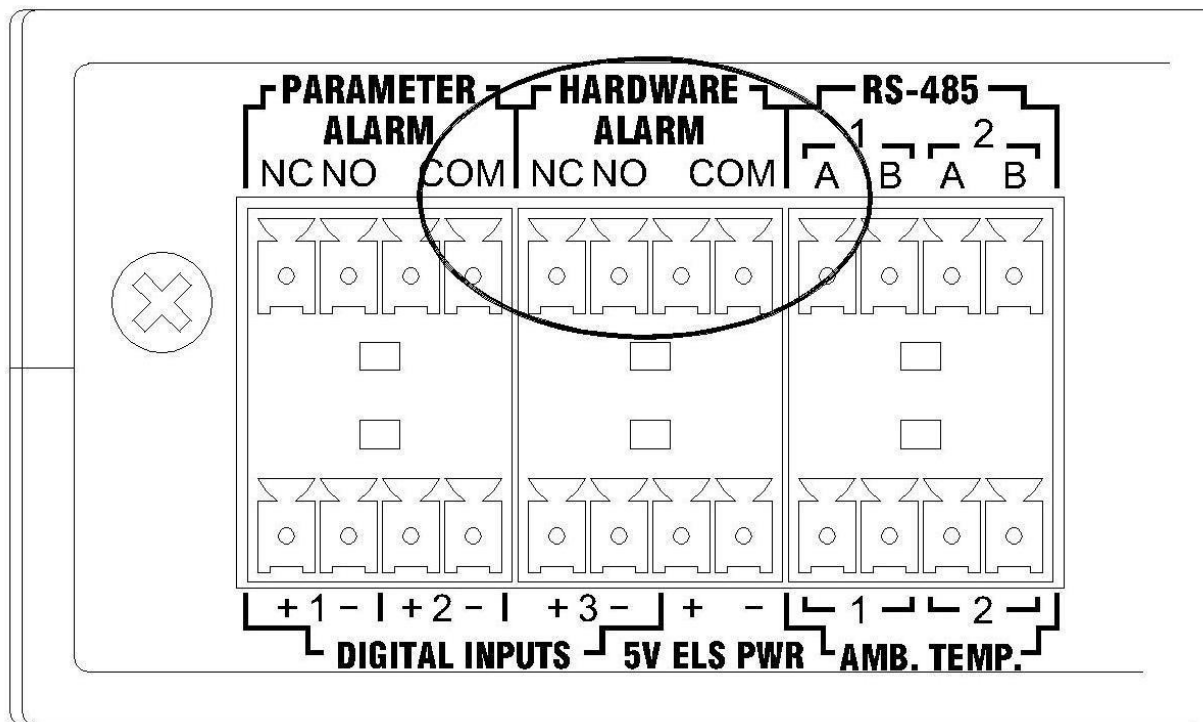


Figure 17 - Hardware Alarm Contacts

## 20. ELS2 Connections

The ELS2 Power connections are made to the +5VDC connection using the optional harness 1108-164-XX. Connect from the 5V ELS PWR port to the POWER jack on the ELSi2.

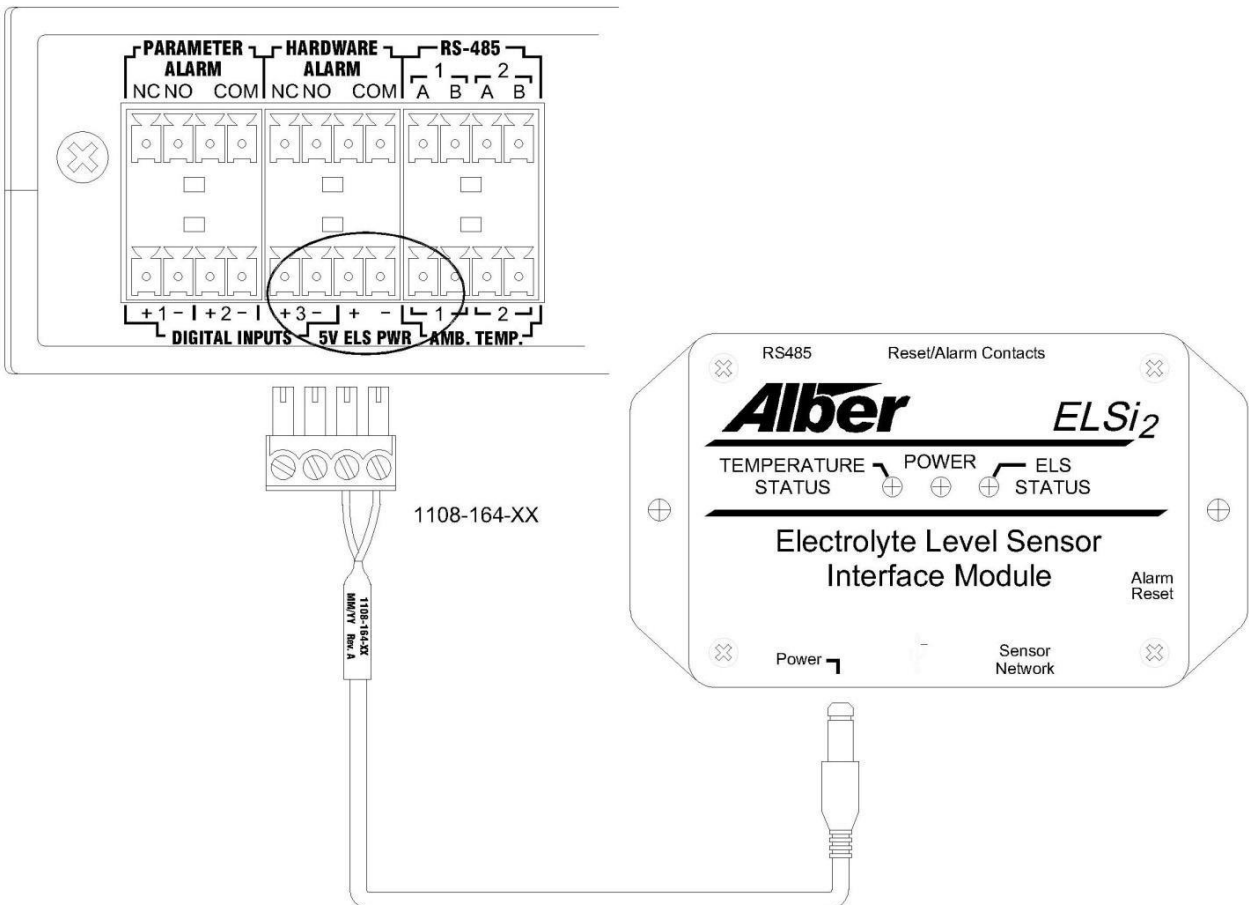


Figure 18 - ELS2 Power Connections

## 21. UXIMe Specifications

### 21.1 UXIMe System Specifications

#### Safety Approvals

- UL61010-1
- EN61010-1
- IEC61010-1

#### EMC Approvals

- EN61326-1
- FCC part 15 class A

#### Operating Environment

- Temperature Range: 0°C to 55°C (32°F to 131°F)
- Humidity Range: 0% to 80% RH (non-condensing) at 5°C to 31°C, 0% to 50% RH (non condensing) at 31°C to 40°C
- Indoor Use Only
- Measurement Category O (500V Transient Rating)
- Pollution Degree 2
- Altitude: 0 to 2000 meters above sea level

#### Alarms

- 2 - Form C relay contact, 2A at 30Vdc

#### Input Power

- DC Power, 45VDC to 150VDC, 11.3W max. +/-10%

#### Communications

- RS485/1 - MODBUS
- RS-485/2 - Proprietary for optional accessories
- Ethernet -TCP/IP MODBUS, SNMP, SMTP
- USB
- Fiber optic for BDSU integration

#### Packaging

- 1U chassis
- 17.00"W x 1.75"H x 12.00"D
- 4.0 lbs.
- Wall or 19" Rack Mount

## 21.2 Cell Measurements

This section describes cell measurement specifications.

Parameter	Tolerance
Cell Voltage	0 to 3V, 0.1% $\pm$ 2mV
Internal Cell Resistance	0 to 32,000 $\mu\Omega$ , 5% of reading $\pm$ 2 $\mu\Omega$
Intercell Resistance	0 to 5000 $\mu\Omega$ , 5% of reading $\pm$ 5 $\mu\Omega$
Intertier/charge cable Resistance	0 to 5000 $\mu\Omega$ , 5% of reading $\pm$ 5 $\mu\Omega$
Cell/Monobloc Temperature	0°C to 80°C $\pm$ 0.1°C (32°F to 176°F)

**Table 6 - Cell Measurement Specifications**

## 21.3 System Measurements



This section describes system measurement specifications.


Parameter	Tolerance	Number Of Inputs
String Voltage	17 Vdc to 150 Vdc $\pm$ .5%	Measured
String Current	0 to 2000ADC $\pm$ 1% of full scale	Measured
Ripple Current	0 to 250 Amperes RMS, $\pm$ 5% of full scale	Measured
Float Current	0 to 5000mADC, $\pm$ 50mA	Measured
Ambient Temperature	0°C to 80°C $\pm$ 0.1°C (32°F to 176°F)	1

**Table 7 - System Measurement Specifications**



# 22. UXIMe Drawings

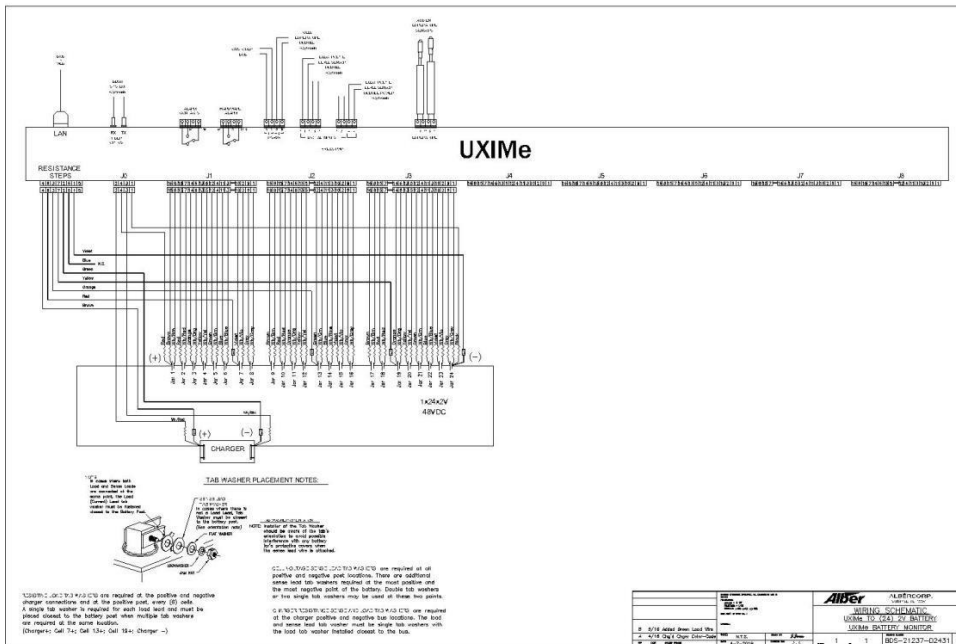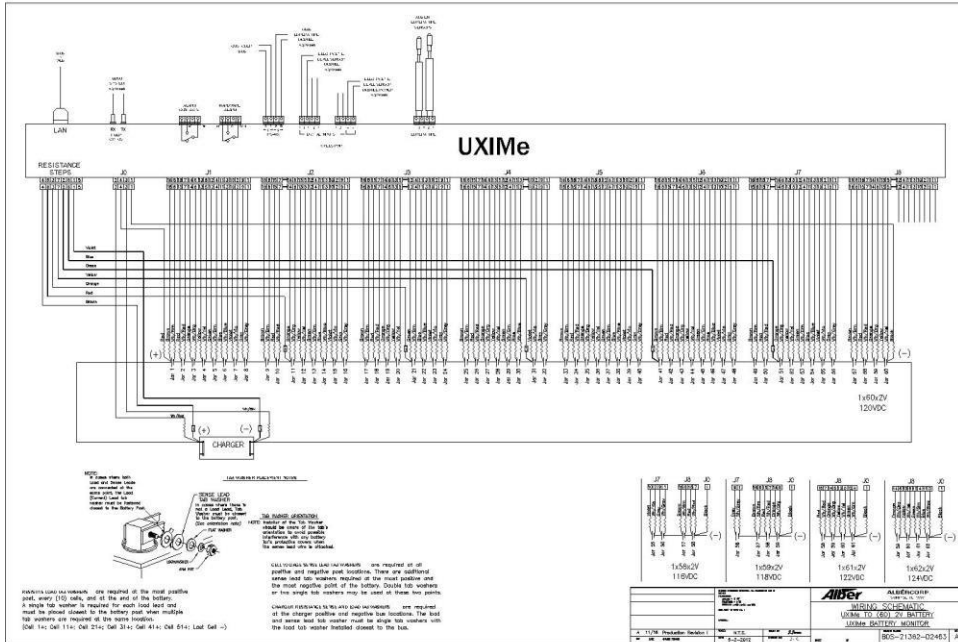

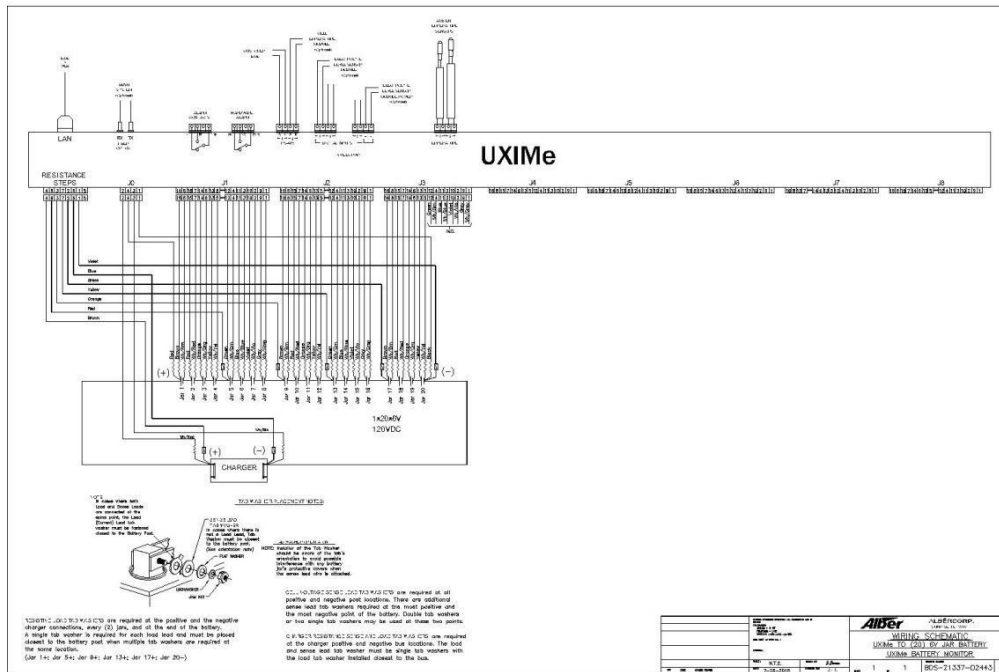

## 23. Index

- 12' Ambient Temperature Sensor 5-2
- 15 AMP SB Fuse 5-2
- Alarms 21-1
- Ambient Temperature 21-2
- Ambient Temperature Input 13-1
- Ambient Temperature Sensor Connection 13-1
- Battery String Isolation 6-1
- Caution 1-1
- CAUTION 10-2
- Cell Measurements 21-2
- Cell/Monobloc Number 1 Identification 6-1
- Cell/Monobloc Temperature 21-2
- Charger Control Sense Lead Connection 12-1
- Communications 21-1
- Digital Input
  - Channel 8-1
  - Configuration 8-1
  - Jumpers 8-1
  - Modes 8-1
- Digital Inputs Connection 14-1
- Discharge Current 21-2
- Dual Posts 10-3
- EMC Approvals 21-1
- Equipment Access 1-2
- Equipment Location 6-1
- Equipment Mounting 9-1
- Equipment Operation 1-2
- Equipment Service 1-2
- Fiber Optic Connection 16-1
- Float Current 21-2
- fuse 10-1
- Fused Load Lead 11-2
- Fused Load Lead Harness Connection 11-1
- Fuses 1-2
- Input Power 21-1
- Installation
  - Task List 4-1
- Insulation Rating For Wires 1-3
- Internal Cell Resistance 21-2
- Internal Component Replacement 2-1
- materials
  - standard 5-3
- Materials Received List 5-1
- Mounting Options 6-1
- Multiple Positive and Negative Posts 10-3
- Network Protocols 17-1
- Note 1-1
- Operating Damaged Equipment 1-2
- Operating Environment 21-1
- Packaging 21-1
- Parameter Alarm Connection 18-1
- Part Number
  - 3703–006–fiber optic cable 5-3
  - KIT–3703–015–fiber optic polishing kit 5-3
- Preventive Maintenance 2-1
- Product Safety Practices 1-2
- Protocols 17-1
- Rack Mounting 9-1
- Recessed Post
  - Tab Washer Assembly 7-2
- Resistance Steps Input Connection 11-1
- Ripple Current 21-2
- RS-485 Communication Connection 15-1
- RS-485 Termination 8-3
- Safety Approvals 21-1
- Safety Information 1-1
- Safety Symbols 1-1
- Sense Lead and Ring Terminal Cleaning 2-1
- Sense Lead Harness Connection 10-1
- Servicing and Adjusting 1-2
- String Voltage 21-2
- Substituting Parts or Modifying Equipment 1-2
- Supported Network Protocols 17-1
- System Component Cleaning 2-1
- System Installation 4-1
- System Measurements 21-2
- System Overview 3-1
- Tab Washers
  - Installation 7-1
- Temperature Harness
  - 12 foot 13-1
- UXIMe System Specifications 21-1
- Ventilation 1-3
- Visual Inspection 2-1
- Wall Mounting Kit 5-3
- Warning 1-1
- Wire Length 6-1